


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from either of the door ECU, the Body ECU No. 2 will make the interior light, ignition light, and foot light come on.

WIRING DIAGRAM

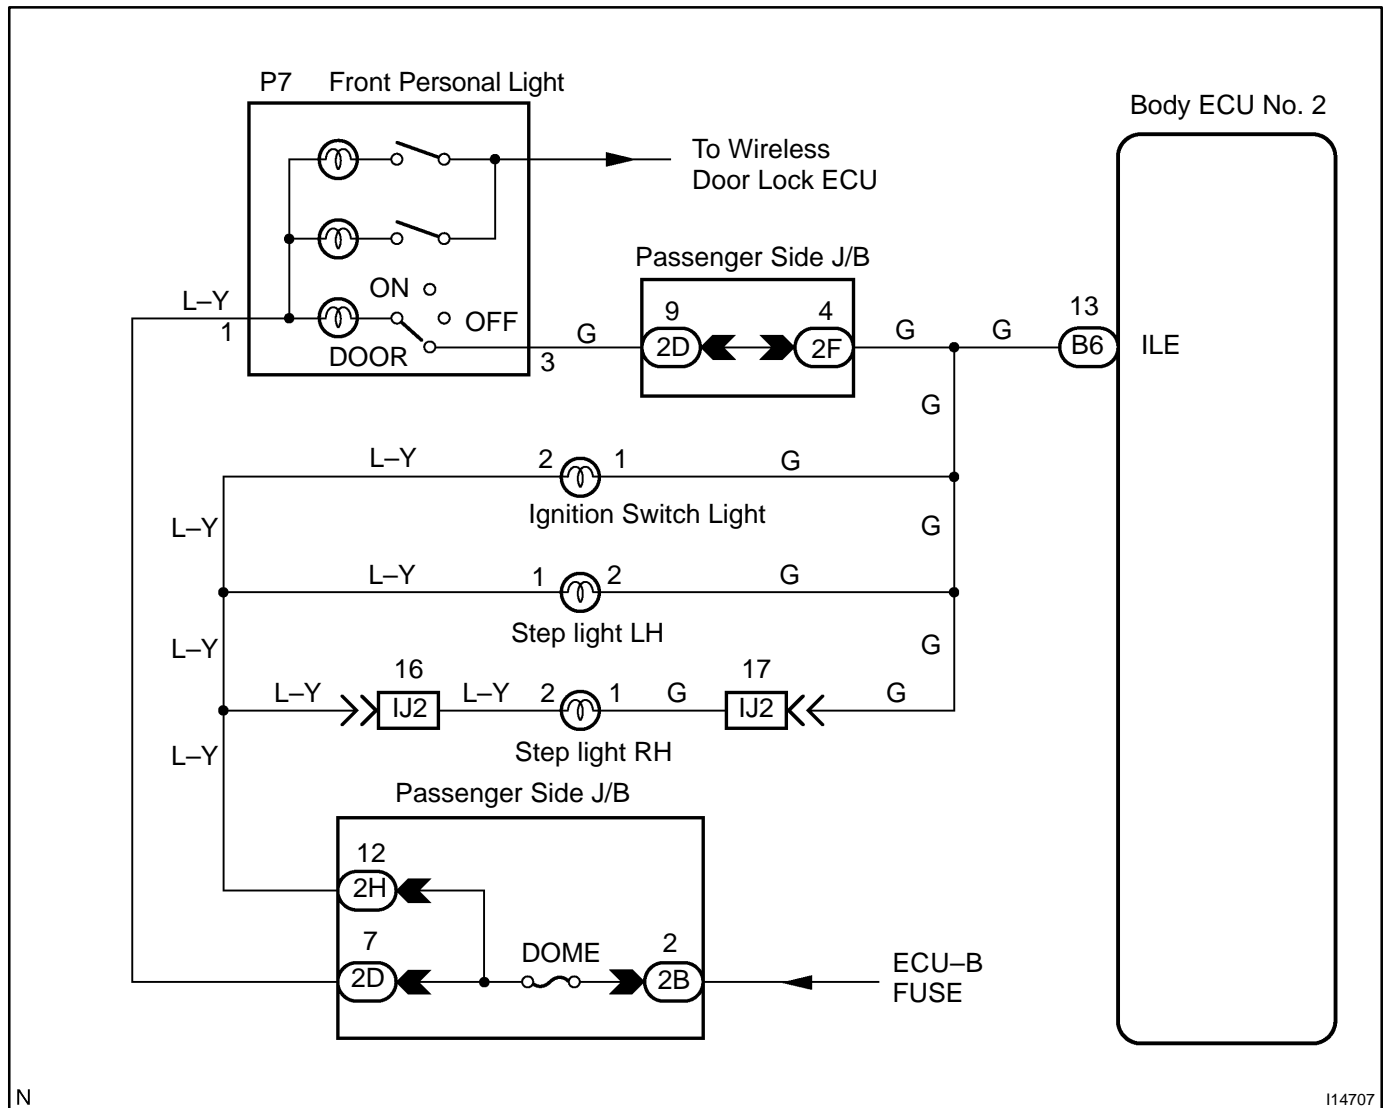

N

I14707

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check illumination (interior light, ignition switch light, foot light) using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the illumination can light in an ACTIVE TEST.

OK:

All the illumination should light on.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-977](#))

NG

2	Check illumination light. (See page BE-31, BE-61)
---	--

NG

Replace the failure light.

OK

3	Check wireharness and connector between each illumination light and Body ECU No. 2, battery and each illumination light .
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-977](#))