


Mirror switch circuit

CIRCUIT DESCRIPTION

This circuit detects the conditions of the mirror selection switch and the mirror position switch.

WIRING DIAGRAM

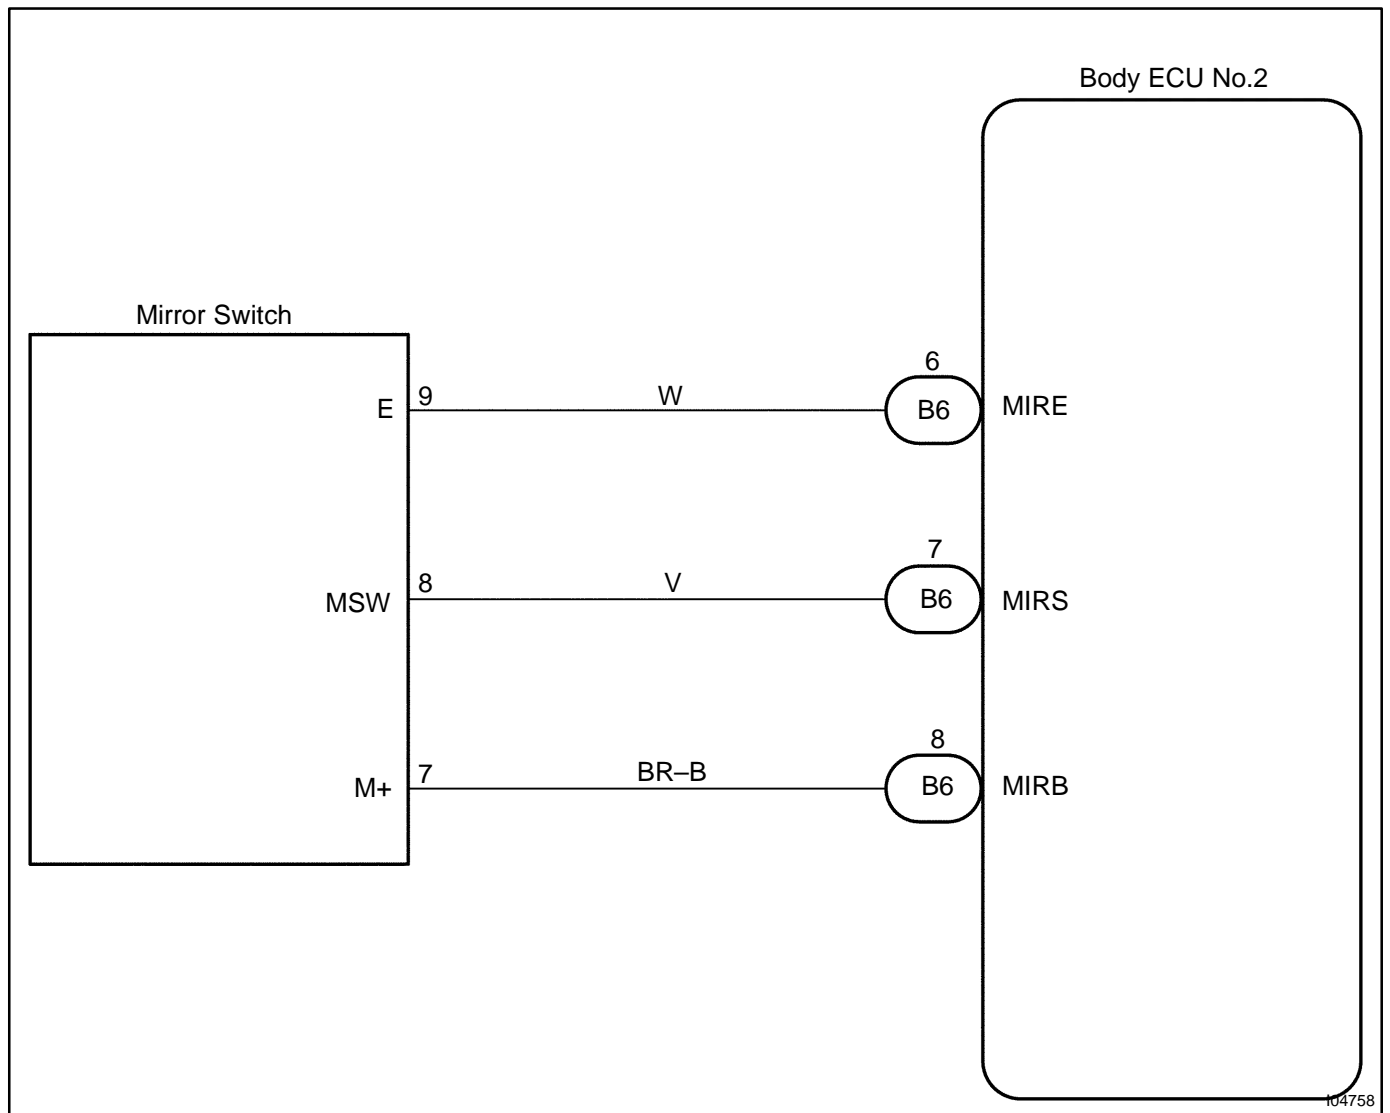

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check mirror switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the mirror switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-1013](#), [DI-1047](#))

NG

2	Check mirror switch (See page BE-174)
---	--

NG

Replace the mirror switch.

OK

3	Check wireharness and connector between mirror switch and body ECU No.2.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-1013](#), [DI-1047](#))