


## Stop light switch circuit

### CIRCUIT DESCRIPTION

The Body ECU No. 2 is detecting the condition of the stop light switch.

### WIRING DIAGRAM

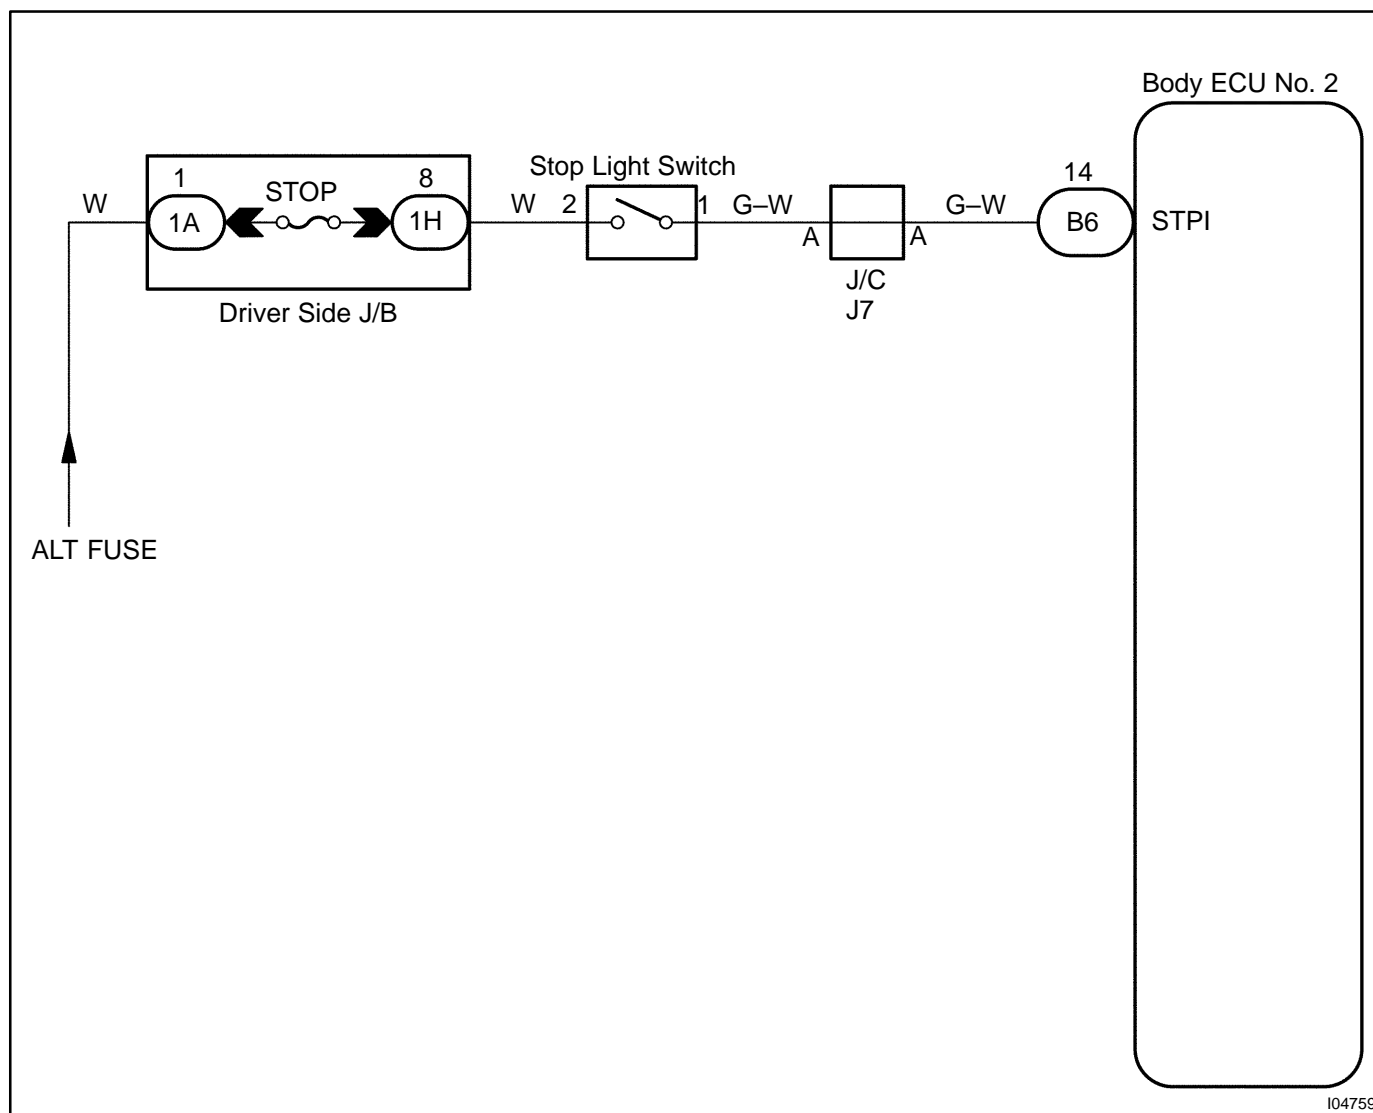

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check stop light switch using LEXUS hand-held tester.
---	---

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check the stop light switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-864](#))

NG

2	Check stop light switch. (See page <a href="#">BE-71</a> )
---	--

NG

Replace the stop light switch.

OK

3	Check wireharness and connector between stop light switch and Body ECU No. 2, battery and stop light switch.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-864](#))