

PROBLEM SYMPTOMS TABLE

LIGHT CONTROL

Symptom	Suspect Area	See page
Automatic light control does not operate	1. Light sensor circuit 2. Headlight control switch circuit 3. Body ECU No. 2	DI-1153 DI-985
Auto turn-off does not operate	1. Door courtesy switch circuit (Driver side) 2. Ignition switch circuit 3. Driver door ECU 4. Body ECU No. 2	DI-1025 BE-31 IN-32

ILLUMINATED ENTRY

Symptom	Suspect Area	See page
Illuminated entry does not operate.	1. Illumination circuit 2. Body ECU No. 2	DI-996

OTHERS

Symptom	Suspect Area	See page
Does not turn off the driver seat belt warning light	1. Driver buckle switch circuit 2. Body ECU No. 2	DI-983
The clock will not deteriorate the light.	1. Clock circuit 2. Body ECU No. 2	DI-1002
Body ECU No. 2 does not operate.	1. Power source circuit 2. Body ECU No. 2	DI-978