

Bulb Circuit

INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1	Perform active test.
----------	-----------------------------

PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that light turns ON or OFF as the LEXUS hand-held tester directs.

HINT:

All lights flush except shift indicator.

OK:


The light operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-898](#)).

NG

2	Check bulb.
----------	--------------------

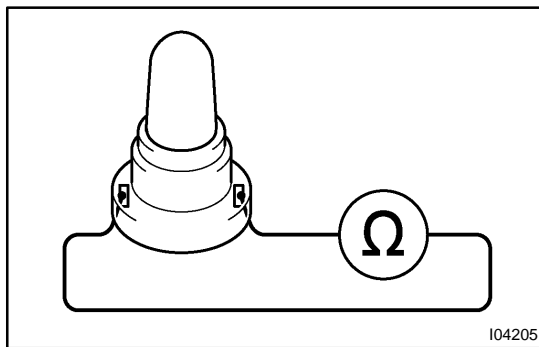

CHECK:

Apply the tester as shown to test for continuity.

OK:

Continuity

NG

Replace bulb.

OK

3	Check circuit plate. (See page BE-93)
---	--

NG**Replace circuit plate.****OK****Check and replace combination meter (See page [BE-83](#)).**