

## Igniter Signal Circuit

### INSPECTION PROCEDURE

When using LEXUS hand-held tester:

- |   |                         |
|---|-------------------------|
| 1 | Check tachometer value. |
|---|-------------------------|

#### PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the DATALIST mode on the LEXUS hand-held tester.

#### CHECK:

When running the engine, check that parameter value of "Tachometer" changes on the screen of the LEXUS hand held tester.

#### OK:

The revolutions displayed on the screen of the tester changes as the engine rotates.

OK

Replace combination meter.

NG

- |   |  |
|---|--|
| 2 | Check harness and connector between combination meter and ECM (See page <a href="#">IN-32</a> ). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check igniter circuit (See page [DI-130](#) and [DI-298](#)).

**When not using LEXUS hand-held tester:**