

Tachometer

INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1	Perform active test.
---	----------------------

PREPARATION:

 
- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:



Check that the probe moves as LEXUS hand-held tester directs in each range.

OK:

The probe operates normally.



2	Check tachometer (See page BE-93).
---	---

  

3	Check circuit plate. (See page BE-93)
---	--



Check and replace combination meter (See page [BE-83](#)).