

## Engine Coolant Temperature Gauge

### INSPECTION PROCEDURE

**HINT:**

If there is not the LEXUS hand-held tester, begin with STEP 2.

<b>1</b>	<b>Perform active test.</b>
----------	-----------------------------

**PREPARATION:**

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

**CHECK:**

Check that the probe moves as LEXUS hand-held tester directs in each range.

**OK:**

The probe operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table. (See page [DI-898](#)).

NG

<b>2</b>	<b>Check engine coolant temperature receiver gauge (See page <a href="#">BE-93</a>).</b>
----------	--

NG

Replace engine coolant temperature receiver gauge.

OK

<b>3</b>	<b>Check engine coolant temperature sender gauge (See page <a href="#">BE-93</a>).</b>
----------	--

NG

Replace engine coolant temperature sender gauge.

OK

4	Check circuit plate (See page <a href="#">BE-93</a> ).
---	--

**NG****Replace circuit plate.****OK****Check and replace combination meter (See page [BE-83](#)).**