

PROBLEM SYMPTOMS TABLE

GAUGE:

Symptom	Suspect Area	See page
Speedometer does not operate or operates abnormally.	3. Speedometer 4. Speed Sensor Circuit	DI-900 DI-906
Tachometer does not operate or operates abnormally.	1. Tachometer 2. Igniter Signal Circuit	DI-901 DI-908
Fuel Gauge does not operate or operates abnormally.	1. Fuel Receiver Gauge 2. Fuel Sender Gauge 3. Wire Harness 4. Combination Meter	DI-902 BE-93 – BE-83
Engine Coolant Temperature Gauge does not operate.	1. Engine Coolant Temperature Receiver Gauge 2. Engine Coolant Temperature Sender Gauge 3. Wire Harness 4. Combination Meter	DI-904 BE-93 – BE-83

INDICATOR LIGHT AND WARNING LIGHT:

Symptom	Suspect Area	See page
Shift indicator light does not light up.	1. Bulb circuit 2. A/T shift indicator light switch 3. Transmission control switch	DI-912 DI-411 DI-478
Open door warning light does not light up.	1. Bulb circuit 2. Door courtesy switch	DI-912 BE-61
Driver seat belt warning light does not light up.	1. Bulb Circuit 2. Driver Buckle Switch Circuit 3. Meter Circuit Plate 4. Wire Harness 5. Body No.2 ECU	DI-912 BE-93 BE-93 – DI-973
Passenger seat belt warning light does not light up.	1. Clock System 2. Passenger Buckle Switch Circuit 3. Occupant Detection Sensor 4. Meter Circuit Plate 5. Wire Harness 6. Body No.1 ECU	BE-234 BE-93 BE-93 BE-93 – DI-927
Low oil pressure warning light does not light up.	1. Bulb Circuit 2. Low oil pressure warning switch	DI-912 BE-93
Discharge warning light does not light up.	1. Bulb circuit 2. Generator (GS300) Generator (GS430)	DI-912 CH-9 CH-10
Brake warning light does not light up.	1. Bulb circuit 2. Parking brake switch 3. Brake fluid level warning switch 4. Combination meter	DI-912 BE-93 BE-93 BE-83
Headlight indicator light does not light up. (USA models)	1. Bulb circuit 2. Headlight and Taillight System 3. Combination meter	DI-912 BE-3 BE-83
Taillight indicator light does not light up. (CANADA models)	1. Bulb circuit 2. Headlight and Taillight System 3. Combination meter	DI-912 BE-3 BE-83
CRUISE MAIN indicator light does not light up.	1. Bulb circuit 2. Cruise control switch 3. Combination meter	DI-912 DI-869 BE-83

DIAGNOSTICS – COMBINATION METER SYSTEM

ECT SNOW indicator light does not light up.	1. Bulb circuit 2. ECT pattern indicator signal 3. Combination meter	2JZ-GE 3UZ-FE	DI-912 DI-406 DI-477 BE-83
ECT PWR indicator light does not light up.	1. Bulb circuit 2. ECT pattern indicator signal 3. Combination meter	2JZ-GE 3UZ-FE	DI-912 DI-406 DI-477 BE-83
VSC OFF indicator light does not light up.	1. Bulb circuit 2. ABS, TRAC and VSC ECU 3. Combination meter		DI-912 DI-568 BE-83
Washer level warning light does not light up.	1. Bulb circuit 2. Window washer level warning switch 3. Combination meter		DI-912 BE-93 BE-83
Rear Lights warning light does not light up.	1. Bulb circuit 2. Light failure sensor 3. Combination meter		DI-912 BE-93 BE-83
Engine oil level warning light does not light up.	1. Bulb circuit 2. Engine oil level warning sensor 3. Combination meter		DI-912 BE-93 BE-83
Any of indicator lights does not light up.	1. Bulb circuit 2. Combination meter ECU power source circuit 3. Combination meter		DI-912 DI-910 BE-83