


## Door courtesy light and courtesy switch circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

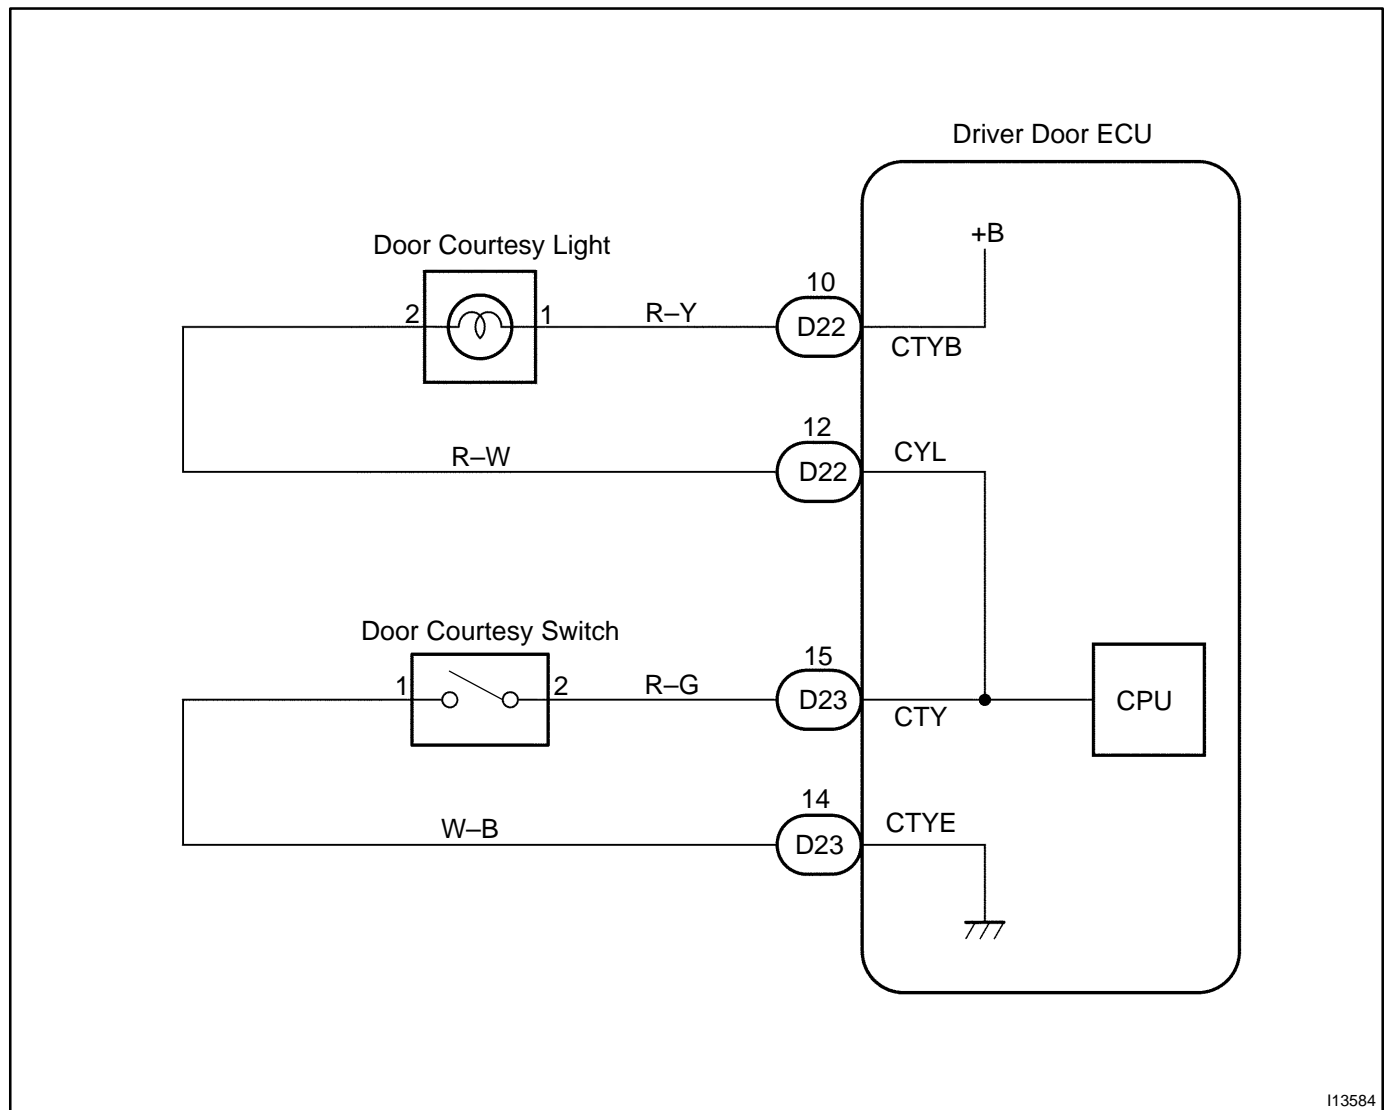

**INSPECTION PROCEDURE**

1	Check operation of door courtesy light.
---	---

**CHECK:**

Check that door courtesy light comes on when door opened, and goes off when door is closed.

**OK:**

Must be operated normally.

**OK**

Proceed to next circuit inspection shown on problem symptom table. (See page [DI-931](#))

**NG**

2	Check courtesy light. (See page <a href="#">BE-61</a> )
---	---

**NG**

Replace the courtesy light.

**OK**

3	Check courtesy switch. (See page <a href="#">BE-61</a> )
---	--

**NG**

Replace the courtesy switch.

**OK**

4	Check wireharness and connector between courtesy light and driver door ECU, courtesy switch and driver door ECU.
---	--

**NG**

Repair or replace wireharness or connector.

**OK**

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-931](#))