


Door lock motor circuit

WIRING DIAGRAM

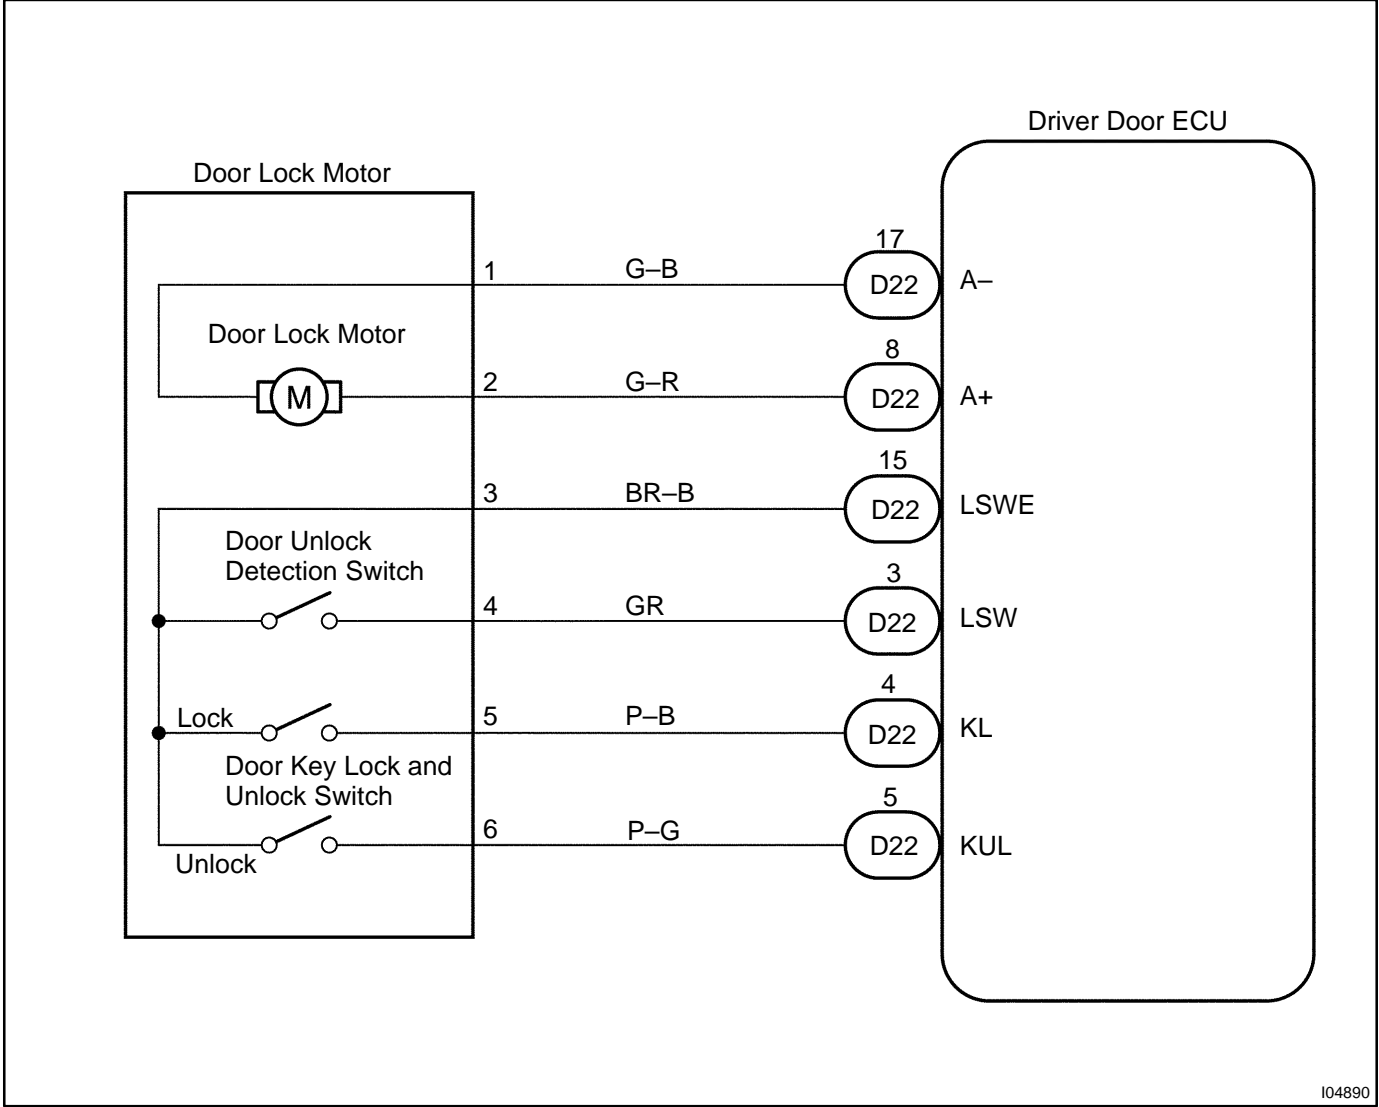

104890

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check door lock motor using LEXUS hand-held tester.
---	-----------------------------------------------------

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the door lock motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table. (See page [DI-931](#))

NG

2	Check door lock motor. (See page BE-134)
---	-----------------------------------------------------------

NG

Replace the door lock motor.

OK

3	Check wireharness and connector between door lock motor and driver door ECU.
---	------------------------------------------------------------------------------

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))