


Memory switch circuit (W/ memory)

WIRING DIAGRAM

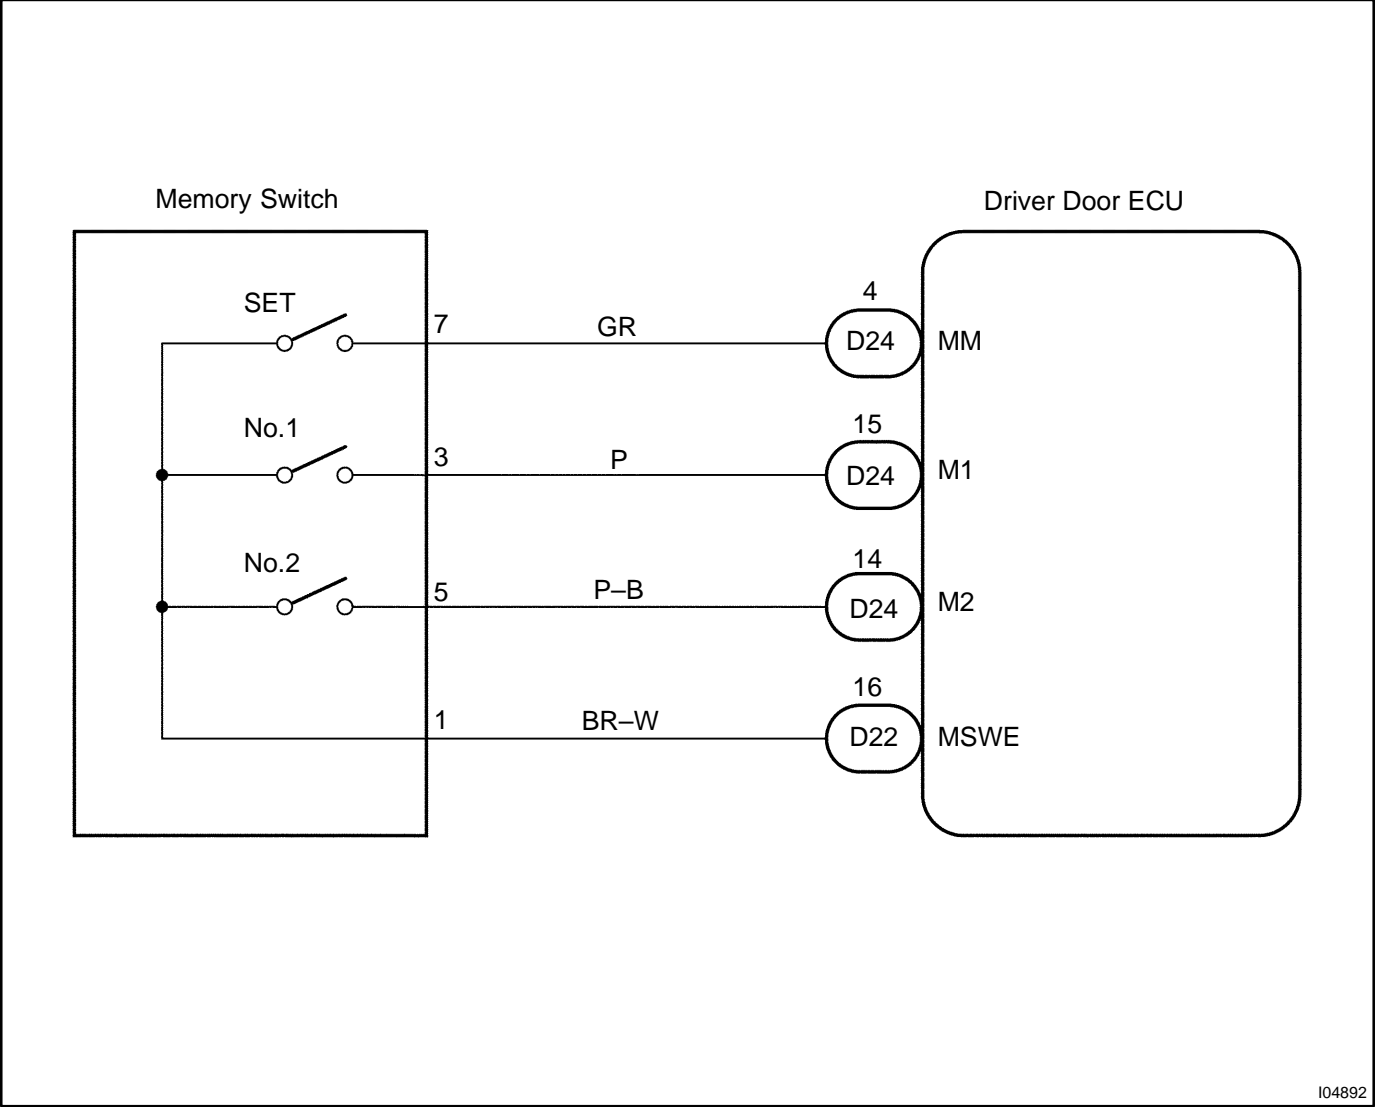

INSPECTION PROCEDURE

1 Check memory switch. (See page [BE-174](#))

NG

Replace the memory switch.

OK

2 Check wireharness and connector between memory switch and driver door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table.
(See page [DI-1013](#))