


Mirror motor circuit

WIRING DIAGRAM

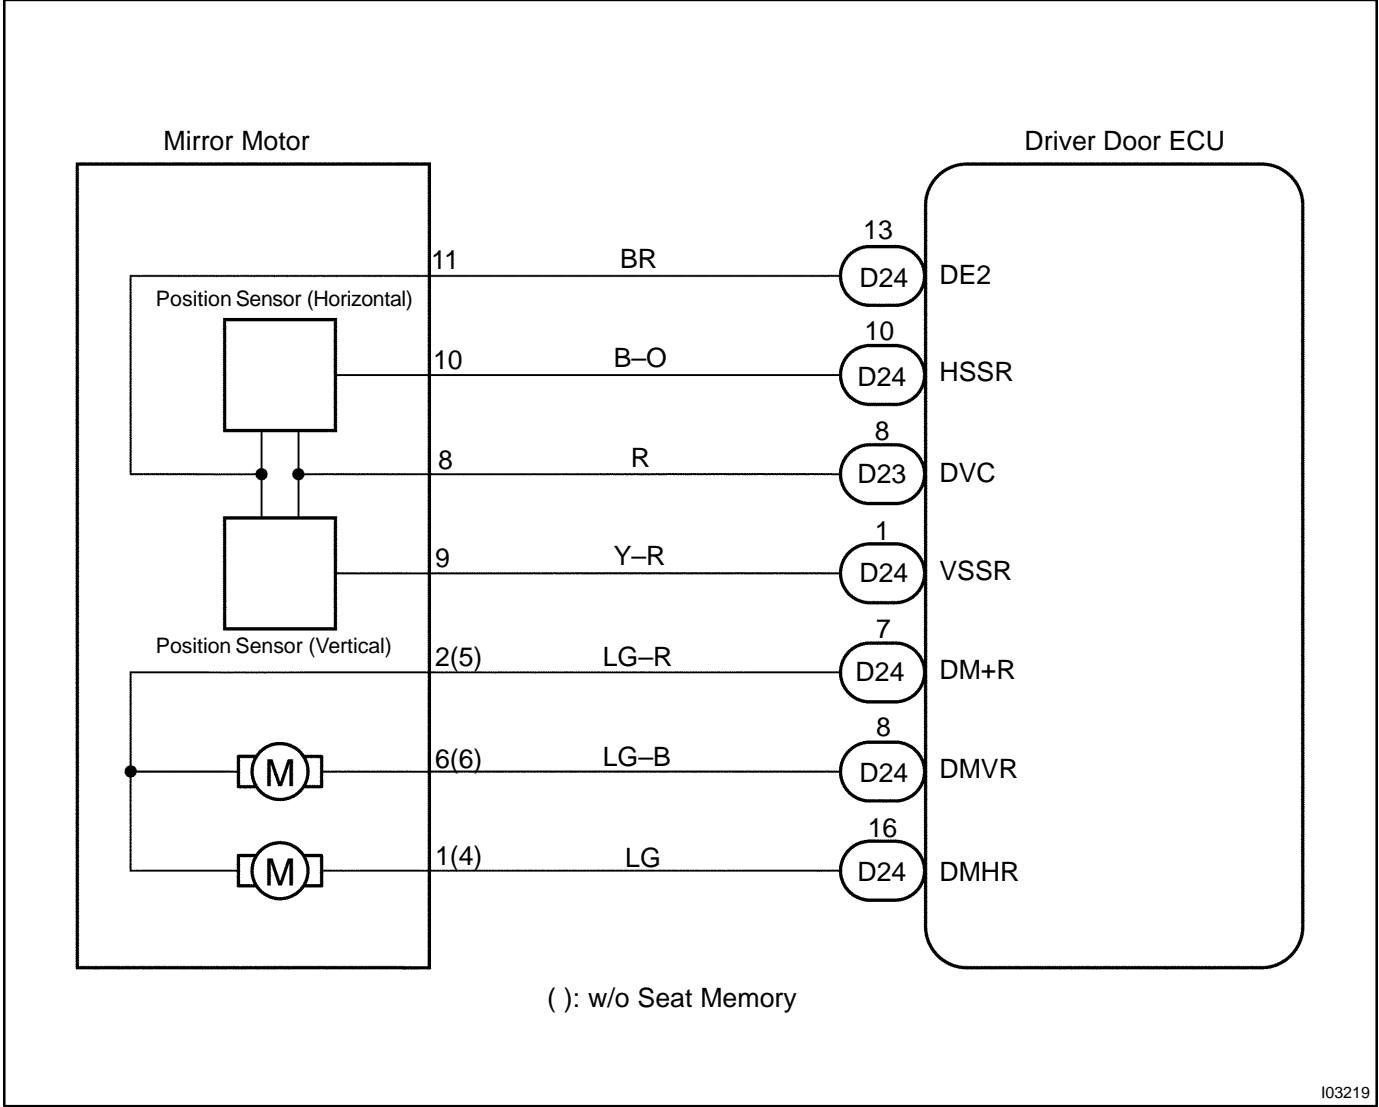

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check mirror motor using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the mirror motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-1013](#))

NG

2	Check mirror motor. (See page BE-174)
---	--

NG

Replace the mirror motor.

OK

3	Check wireharness and connector between mirror motor and driver door ECU.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-1013](#))