


# Power window master switch circuit

## CIRCUIT DESCRIPTION

Power window master switch circuit can be checked using DTC check. (See page [DI-1147](#))

## WIRING DIAGRAM

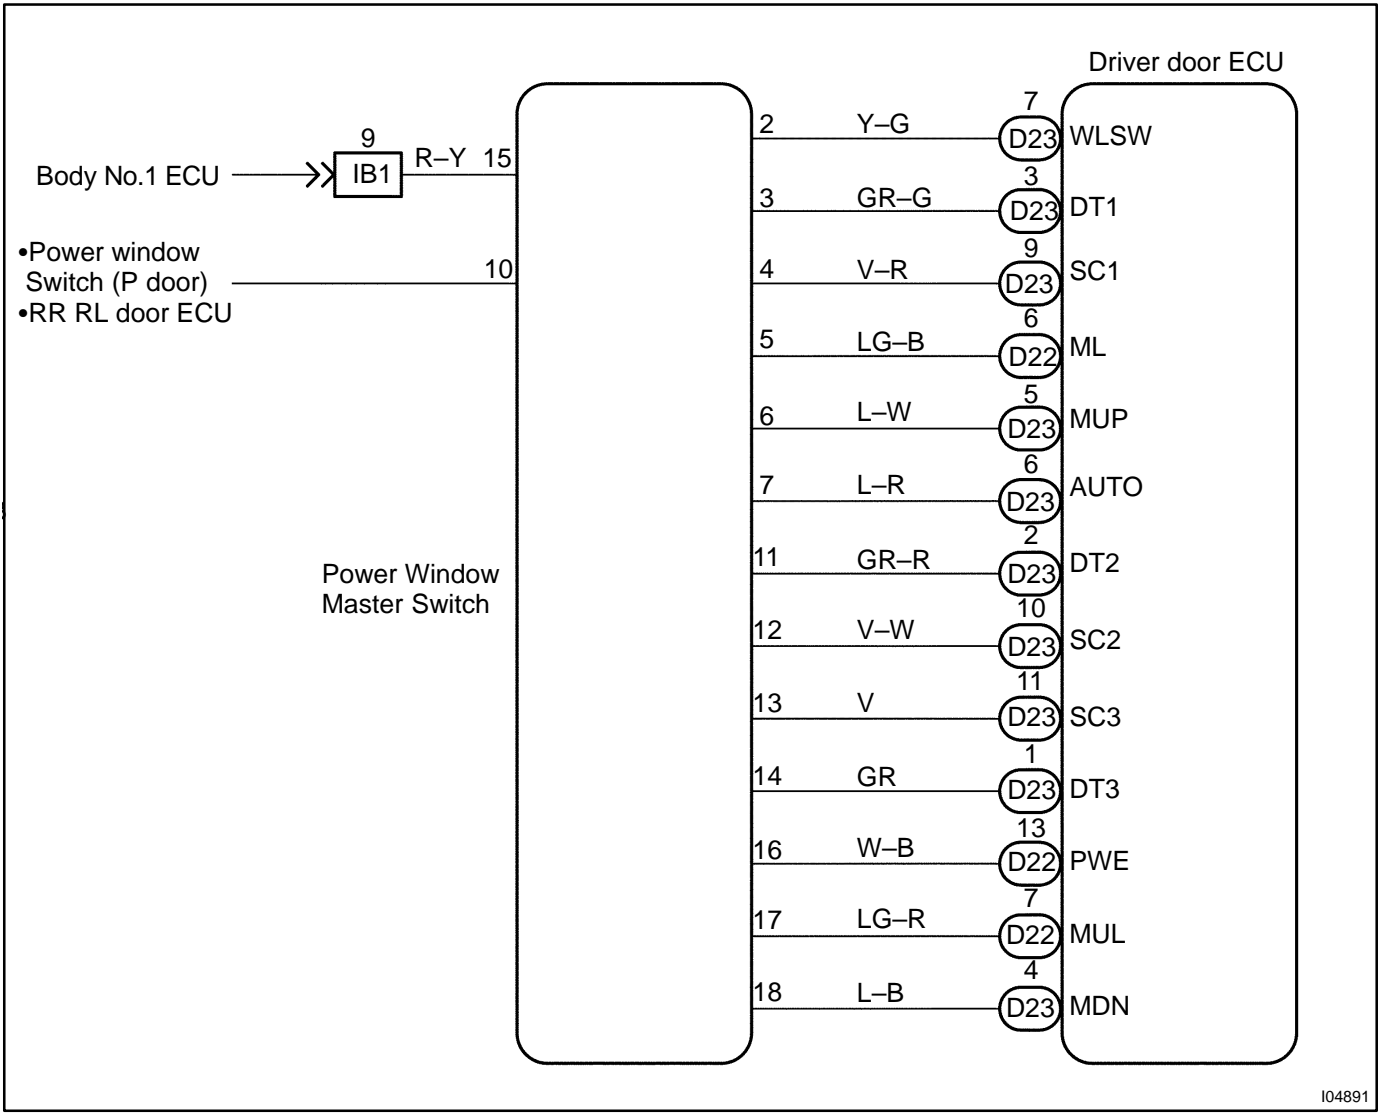

**INSPECTION PROCEDURE**

1	Check the power window master switch circuit using DTC check. (See page <a href="#">DI-1147</a> )
---	--

**OK**

Proceed to next circuit inspection shown on problem symptom table.  
(See page [DI-931](#), [DI-1013](#))

**OK**

2	Check the power window master switch. (See page <a href="#">BE-123</a> )
---	--

**NG**

Replace the power window master switch.

**OK**

3	Check wireharness and connector between power window master switch and driver door ECU.
---	---

**NG**

Repair or replace wireharness or connector.

**OK**

Proceed to next circuit inspection shown on problem symptom table.  
(See page [DI-931](#), [DI-1013](#))