


Mirror retract motor circuit (TAIWAN only)

WIRING DIAGRAM

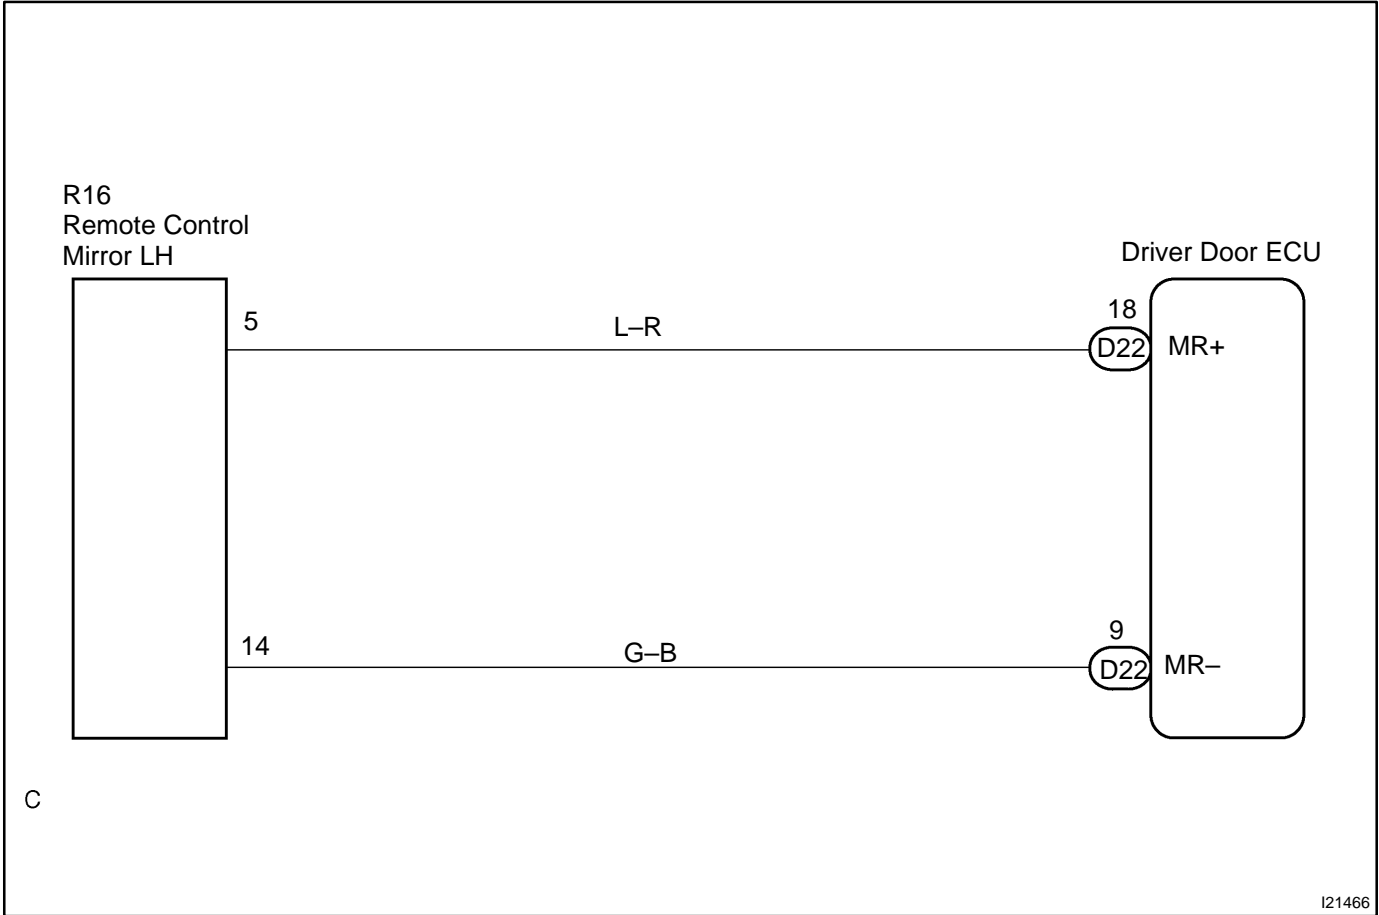

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check mirror retract motor using hand-held tester.
---	--

**PREPARATION:**

Connect the mirror retract hand-held tester to the DLC3.

**CHECK:**

Check the mirror retract motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-1047](#))

NG

2	Check mirror retract motor. (See page <a href="#">BE-174</a> )
---	--

NG

Replace the mirror retract switch.

OK

3	Check wireharness and connector between mirror retract motor and driver door ECU.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on  
problem symptoms table.  
(See page [DI-1013](#))