

## PROBLEM SYMPTOMS TABLE

### POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
All the power windows does not operate.	3. PWS circuit 4. Power window master switch circuit 5. Body ECU No. 1	<a href="#">DI-969</a> <a href="#">DI-1017</a>
Power window does not operate.	1. Power window switch circuit 2. Power window motor circuit 3. Driver door ECU	<a href="#">DI-1017</a> <a href="#">DI-1027</a>
Auto up (or down) function does not operate.	1. Power window master switch circuit 2. Driver door ECU	<a href="#">DI-1017</a>
Jam protection function and auto up (or down) function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Driver door ECU	<a href="#">DI-1029</a> <a href="#">DI-1031</a>

### POWER MIRROR CONTROL SYSTEM

Symptom	Suspect Area	See page
Both right and left mirror does not operate.	1. Mirror switch circuit 2. Body ECU No. 2	<a href="#">DI-990</a>
Only one side of mirror does not operate.	1. Mirror motor circuit 2. Driver door ECU	<a href="#">DI-1033</a>
Mirror on the opposite side will be operated.	1. Mirror switch circuit	<a href="#">DI-990</a>
Mirror will not be operated as indicated with switch.	2. Body ECU No. 2	

### OTHERS

Symptom	Suspect Area	See page
Parts of the door does not function.	1. Power source circuit 2. Driver door ECU	<a href="#">DI-1014</a>