

# ENGINE (2JZ–GE)

## HOW TO PROCEED WITH TROUBLESHOOTING

DI2DE-05

Troubleshoot in accordance with the procedure on the following page.

