

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	23.Starter 24.Starter relay	ST-15 ST-17
No initial combustion (Does not start)	1. Engine immobiliser system 2. ECM power source circuit 3. Fuel pump control circuit	DI-885 DI-156 DI-160
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-160
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-153 DI-160 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-153 DI-160
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-153 DI-160
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-1309 DI-156
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-1309 DI-160
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-160
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-156 DI-160
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-160 DI-362
Surging (Poor driveability)	1. Fuel pump control circuit	DI-160
Soon after starting (Engine stall)	1. Engine immobiliser system 2. Fuel pump control circuit	DI-885 DI-160
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-1309 IN-22