

| | | |
|------------|--------------|---|
| DTC | P0115 | Engine Coolant Temp. Circuit Malfunction |
|------------|--------------|---|

CIRCUIT DESCRIPTION

A thermistor built into the engine coolant temperature sensor changes the resistance value according to the engine coolant temperature.

The structure of the sensor and connection to the ECM is the same as in the DTC P0110 shown on page [DI-198](#).


| DTC No. | DTC Detecting Condition | Trouble Area |
|---------|--|--|
| P0115 | Open or short in engine coolant temp. sensor circuit | <ul style="list-style-type: none"> • Open or short in engine coolant temp. sensor circuit • Engine coolant temp. sensor • ECM |

HINT:

After confirming DTC P0115, use the OBD II scan tool or LEXUS hand-held tester to confirm the engine coolant temperature from the CURRENT DATA.

| Temperature Displayed | Malfunction |
|-----------------------|---------------|
| −40°C (−40°F) | Open circuit |
| 140°C (284°F) or more | Short circuit |

WIRING DIAGRAM

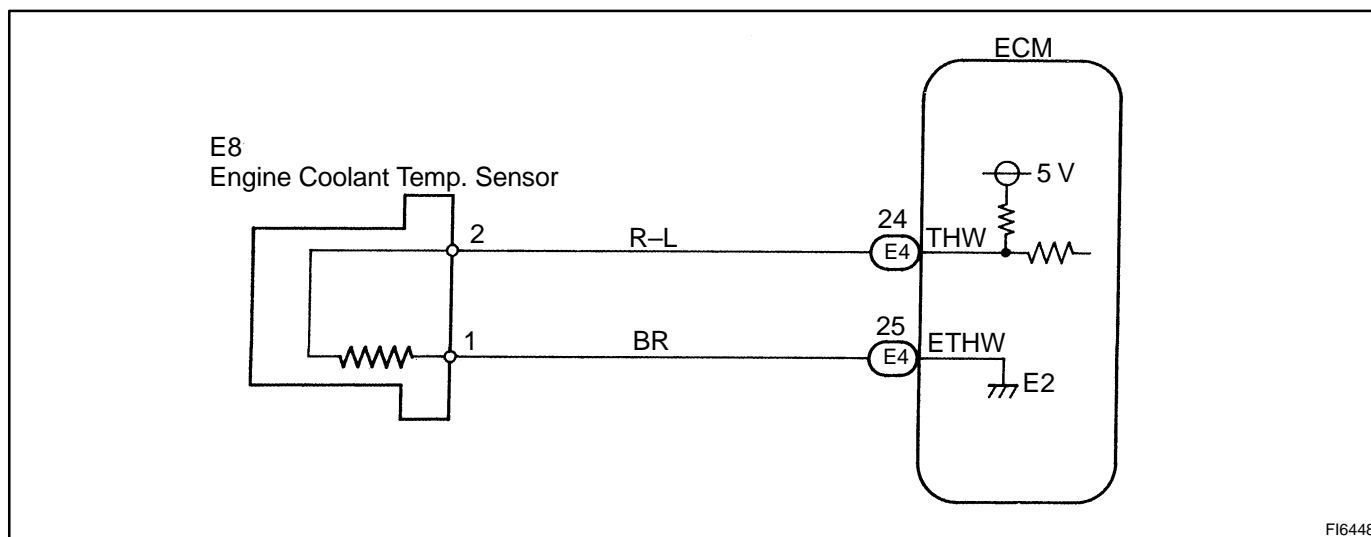

FI6448

INSPECTION PROCEDURE

HINT:

Read freeze frame data using LEXUS hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

- | | |
|----------|--|
| 1 | Connect OBD II scan tool or LEXUS hand-held tester, and read value of engine coolant temperature. |
|----------|--|

PREPARATION:

- (a) Connect the OBD II scan tool or LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the OBD II scan tool or LEXUS hand-held tester main switch ON.

CHECK:

Read the temperature value on the OBD II scan tool or LEXUS hand-held tester.

OK:

Same as actual engine coolant temperature.

HINT:

- If there is open circuit, OBD II scan tool or LEXUS hand-held tester indicates -40°C (-40°F).
- If there is short circuit, OBD II scan tool or LEXUS hand-held tester indicates 140°C (284°F) or more.


NG

-40°C (-40°F) ... Go to step 2.
 140°C (284°F) or more ... Go to step 4.

OK

Check for intermittent problems
 (See page [DI-173](#)).

- | | |
|----------|--|
| 2 | Check for open in harness or ECM. |
|----------|--|

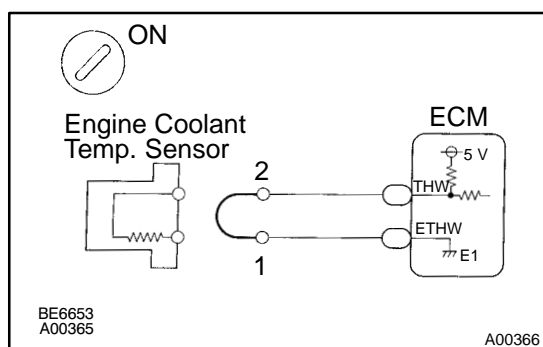**PREPARATION:**

- (a) Disconnect the engine coolant temperature sensor connector.
- (b) Connect the sensor wire harness terminals together.
- (c) Turn the ignition switch ON.

CHECK:

Read the temperature value on the OBD II scan tool or LEXUS hand-held tester.

OK:


Temperature value: 140°C (284°F) or more

OK

Confirm good connection at sensor. If OK, replace engine coolant temperature sensor.

NG

3 Check for open in harness or ECM.

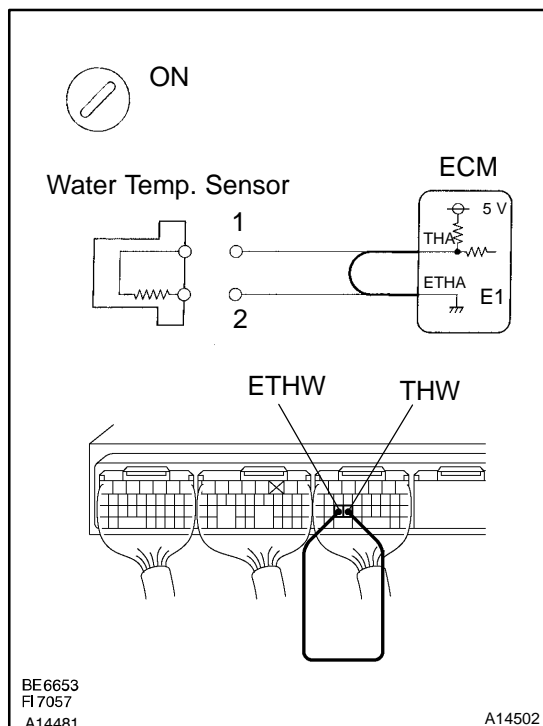

PREPARATION:

- Remove the engine room ECU cover (See page SF-81).
- Connect between terminals THW and ETHW of the ECM connector.

HINT:

The engine coolant temperature sensor connector is disconnected. Before checking, do a visual and contact pressure check for the ECM connector (See page IN-32).

- Turn the ignition switch ON.

CHECK:

Read the temperature value on the OBD II scan tool or LEXUS hand-held tester.

OK:

Temperature value: 140°C (284°F) or more


OK

Open in harness between terminals ETHW and THW, repair or replace harness.

NG

Confirm good connection at ECM. If OK, check and replace ECM (See page IN-32).

4 Check for short in harness and ECM.

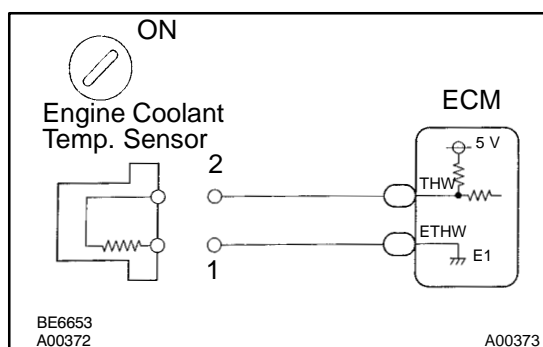

PREPARATION:

- Disconnect the engine coolant temperature sensor connector.
- Turn the ignition switch ON.

CHECK:

Read the temperature value on the OBD II scan tool or LEXUS hand-held tester.

OK:


Temperature value: -40°C (-40°F)

OK

Replace engine coolant temperature sensor.

NG

5 Check for short in harness or ECM.

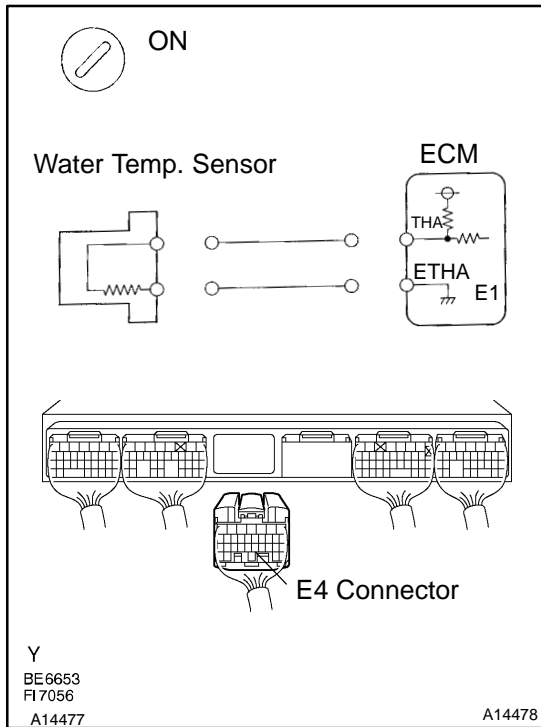

PREPARATION:

- Remove the engine room ECU cover
(See page SF-81).
- Disconnect the E4 connector from the ECM.

HINT:

The engine coolant temperature sensor connector is disconnected.

- Turn the ignition switch ON.

CHECK:

Read the temperature value on the OBD II scan tool or LEXUS hand-held tester.

OK:

Temperature value: -40°C (-40°F)

OK

Repair or replace harness or connector.

NG

Check and replace ECM (See page [IN-32](#)).