

ENGINE (3UZ-FE)

HOW TO PROCEED WITH TROUBLESHOOTING

DI2BY-03

Troubleshoot in accordance with the procedure on the following page.

