

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	3. Starter 4. Starter relay	ST-15 ST-17
No initial combustion (Does not start)	1. Engine immobiliser system 2. ECM power source circuit 3. Fuel pump control circuit	DI-885 DI-329 DI-333
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-333
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-326 DI-333 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-326 DI-333
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-326 DI-333
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-1309 DI-329
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-1309 DI-333
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-333
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-329 DI-333
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-333 DI-433
Surging (Poor driveability)	1. Fuel pump control circuit	DI-333
Soon after starting (Engine stall)	1. Engine immobiliser system 2. Fuel pump control circuit	DI-885 DI-333
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-1309 IN-22
Unable to refuel/Difficult to refuel	1. ORVR system	EC-6