

29. CD MAGAZINE CANNOT BE INSERTED

INSPECTION PROCEDURE

1 Is CD magazine already inserted?

YES

Eject CD magazine.

NO

2 Is auto search button of radio operating normally?

YES

Go to step 6.

NO

3 Check if RADIO No. 1 fuse is OK?

NG

Replace RADIO No. 1 fuse.

OK

4 Is power supplied to +B terminal of stereo component amplifier?

NO

+B wire harness faulty.

YES

5 Check if GND (wire harness side) of radio receiver assembly.

NG

+B wire harness faulty.

OK

Radio assembly faulty.

6 Is power supplied to +B terminal of CD auto changer?

No

Radio receiver assembly faulty.

YES

7 Check if GND (wire harness side) of CD auto changer grounded normally?

NG

Radio receiver assembly faulty.

OK

CD auto changer faulty.