

## 36. No power coming in.

### INSPECTION PROCEDURE

1 Is tape player operating normally?

Yes

Radio assembly faulty.

No

2 Check if RADIO No. 1 fuse is OK?

NG

Replace fuse.

OK

3 Is power supplied to ACC terminal of power amplifier?

No

ACC wire harness faulty.

YES

4 Check if RADIO No. 1 fuse is OK?

No

Replace fuse.

YES

<b>5</b>	<b>Is power supplied to +B terminal of power amplifier?</b>
----------	---

**No****+B wire harness faulty.****YES**

<b>6</b>	<b>Check if GND (wire harness side) of power amplifier grounded normally?</b>
----------	---

**NG****Ground faulty.****OK**

<b>7</b>	<b>Is power supplied to ACC terminal of radio assembly?</b>
----------	---

**No****Power amplifier or wire harness faulty.****YES**

<b>8</b>	<b>Is power supplied to +B terminal of radio assembly?</b>
----------	--

**No****Power amplifier or wire harness faulty.****YES**

9	Check if GND (wire harness side) of radio assembly grounded normally?
---	---

NG

Ground faulty.

OK

Radio assembly faulty.