

38. No power coming, but woofer amplifier not operating.**INSPECTION PROCEDURE**

1 Is tape player operating normally?

Yes

Radio receiver assembly faulty.

No

2 Check if RADIO No. 2 fuse is OK?

NG

Replace fuse.

OK

3 Is power supplied to ACC terminal of stereo component amplifier?

No

ACC wire harness faulty.

YES

4 Check if RADIO No.1 fuse is OK?

NG

Replace fuse.

OK

5	Is power supplied to +B terminal of stereo component amplifier?
----------	--

No**+B wire harness faulty.****YES**

6	Check if GND (wire harness side) of radio receiver assembly grounded normally.
----------	---

NG**GND faulty.****OK**

7	Is power supplied to ACC terminal of radio receiver assembly?
----------	--

No**Stereo component amplifier faulty.****YES**

8	Is power supplied to +B terminal of radio receiver assembly?
----------	---

No**Stereo component amplifier faulty.****YES**

9	Check if GND (wire harness side) of radio receiver assembly grounded normally.
----------	---

NG**GND faulty.****OK**

