

## 15. Touch switch does not function. (Navigation screen only)

### INSPECTION PROCEDURE

- |   |  |
|---|--|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--|

NG

Replace the multi display.

OK

- |   |  |
|---|--|
| 2 | Check "AVC-LAN communication circuit". (See page <a href="#">DI-1291</a> ) |
|---|--|

NG

Replace or repair AVC-LAN circuit.

OK

Replace the navigation ECU.