

DTC	B1262 / 62	A/C amplifier communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION


This DTC is output when communication stops between A/C amplifier and Body ECU No. 1

DTC No.	DTC Detecting Condition	Trouble Area
B1262/62	No communication from A/C amplifier more than 10 seconds.	<ul style="list-style-type: none">• A/C amplifier• Wireharness

WIRING DIAGRAM

See page [DI-1130](#)

1 Check wireharness

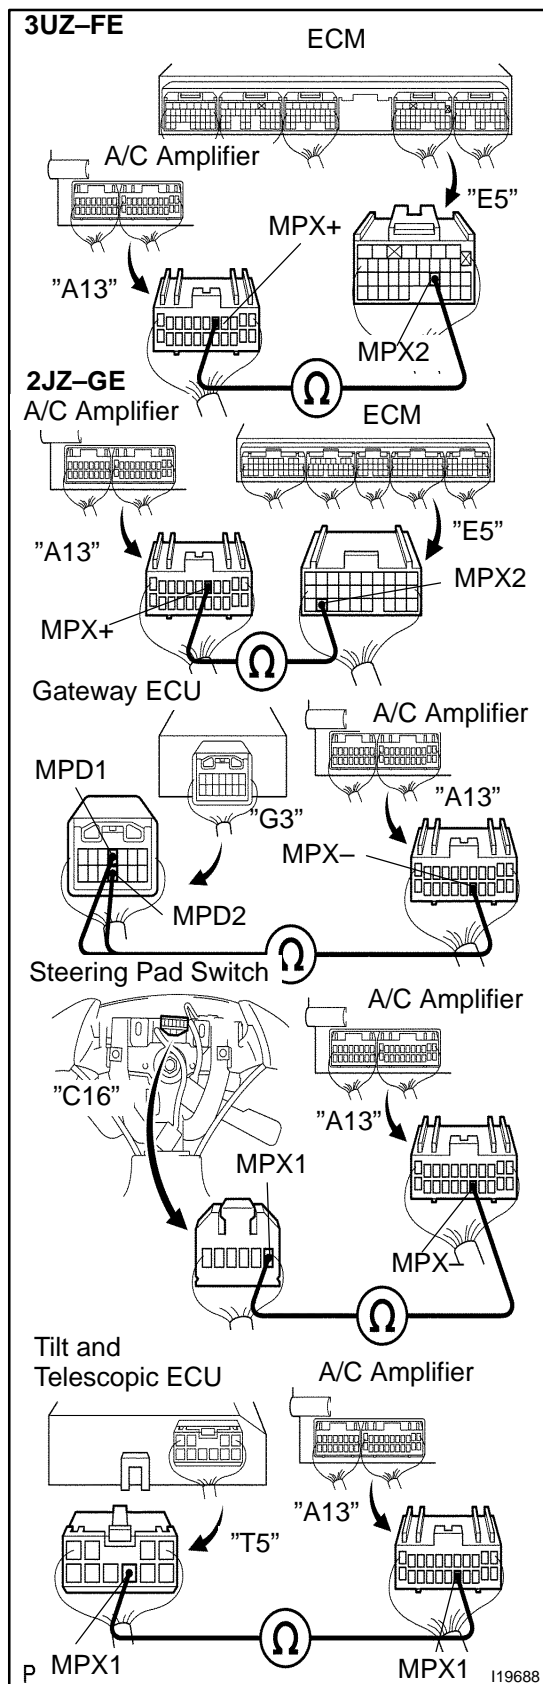

PREPARATION:

Disconnect the connector "E5" of ECM, "G6" of gateway ECU, "C16" of steering pad switch, T5 of tilt and telescopic ECU and A/C amplifier.

CHECK:

- Check continuity between terminals MPX+ of A/C amplifier and MPX2 of ECM.
- Check continuity between terminals MPD1, MPD2 of gateway ECU and MPX- of A/C amplifier.
- 3UZ-FE engine:
Check continuity between terminals MPX1 of steering pad switch and MPX+ of A/C amplifier.
- Check continuity between MPX1 of tilt and telescopic ECU and MPX- of A/C amplifier.

OK:

Continuity exists in wireharness.

NG

Repair or replace wireharness.

OK

Replace the A/C amplifier.