

<b>DTC</b>	<b>B1272 / 72</b>	<b>Power seat ECU communication stop (w/ Seat memory vehicle only)</b>
------------	-------------------	--

## CIRCUIT DESCRIPTION

This DTC is output when communication stops between power seat ECU and Body No.1 ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1272/72	No communication from seat ECU more than 10 seconds.	<ul style="list-style-type: none"> <li>• Power seat ECU</li> <li>• Wireharness</li> </ul>

## WIRING DIAGRAM

See page [DI-1125](#)

## INSPECTION PROCEDURE

<b>1</b>	<b>Check power seat ECU.</b>
----------	------------------------------

### CHECK:

Check that the operation of front vertical and rear vertical is normal.

### HINT:

With this inspection, the power seat ECU CPU can be diagnosed if it works normally or not.

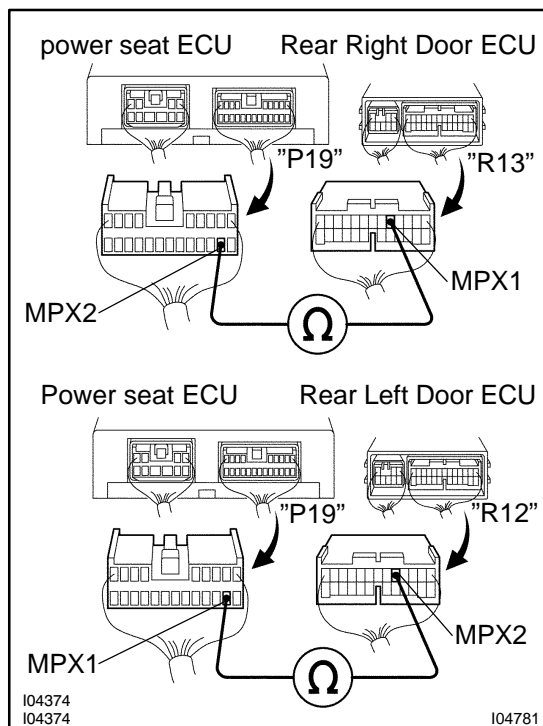
**NG**

**Replace the power seat ECU.**

**OK**

## 2

## Check wireharness

**PREPARATION:**

Disconnect connector "R13" of rear right door ECU, "P19" of power seat ECU and "R12" of rear left door ECU.

**CHECK:**

- Check continuity between terminals MPX1 of rear right door ECU and MPX2 of power seat ECU.
- Check continuity between terminals MPX1 of power seat ECU and MPX2 of rear left door ECU.

**OK:**

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

**HINT:**

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace power seat ECU.