


Door lock control switch circuit

CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to [DI-1147](#))

WIRING DIAGRAM

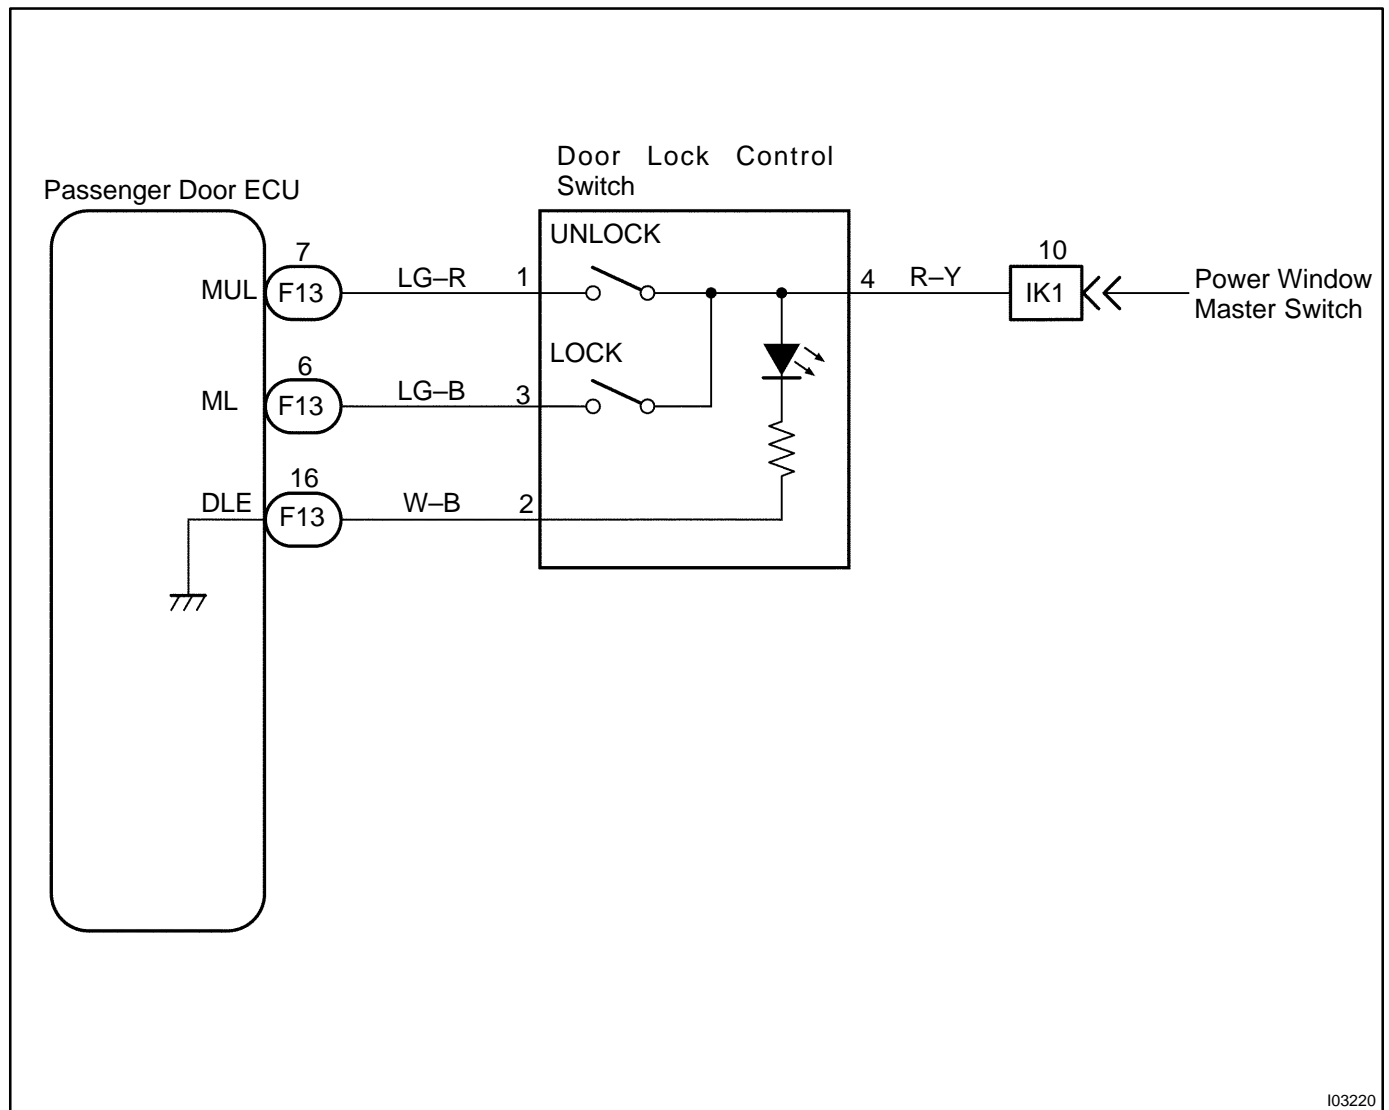

I03220

INSPECTION PROCEDURE

1	Check the door lock control switch circuit using DTC check. (See page DI-1147)
---	---

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-931](#))

OK

2	Check the door lock control switch. (See page BE-134)
---	--

NG

Replace the door lock control switch.

OK

3	Check wireharness and connector between door lock control switch and passenger door ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

4	Check wireharness and connector between door lock control switch and power window master switch.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))