


# Power window motor circuit

## WIRING DIAGRAM

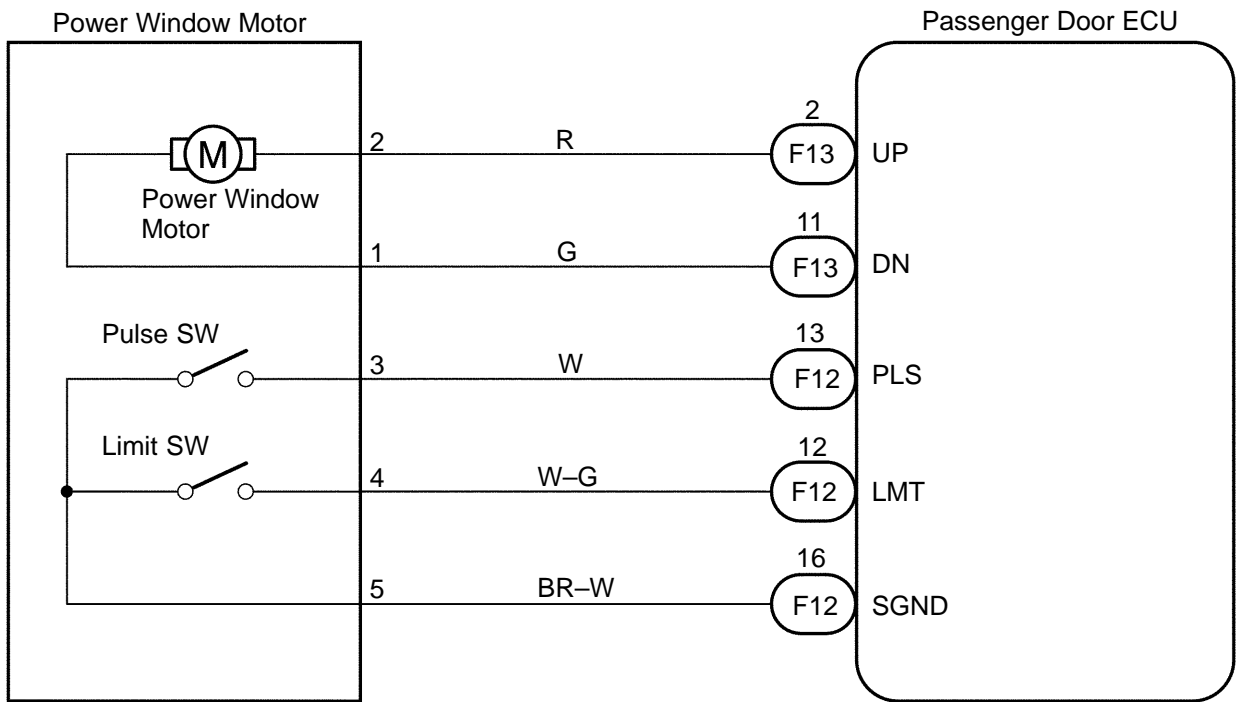

I03214

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check power window motor using LEXUS hand-held tester.
---	--

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check that the power window motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-1047](#))

NG

2	Check power window motor. (See page <a href="#">BE-123</a> )
---	--

NG

Replace the power window motor.

OK

3	Check wireharness and connector between power window motor and passenger door ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-1047](#))