


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the passenger door ECU.

WIRING DIAGRAM

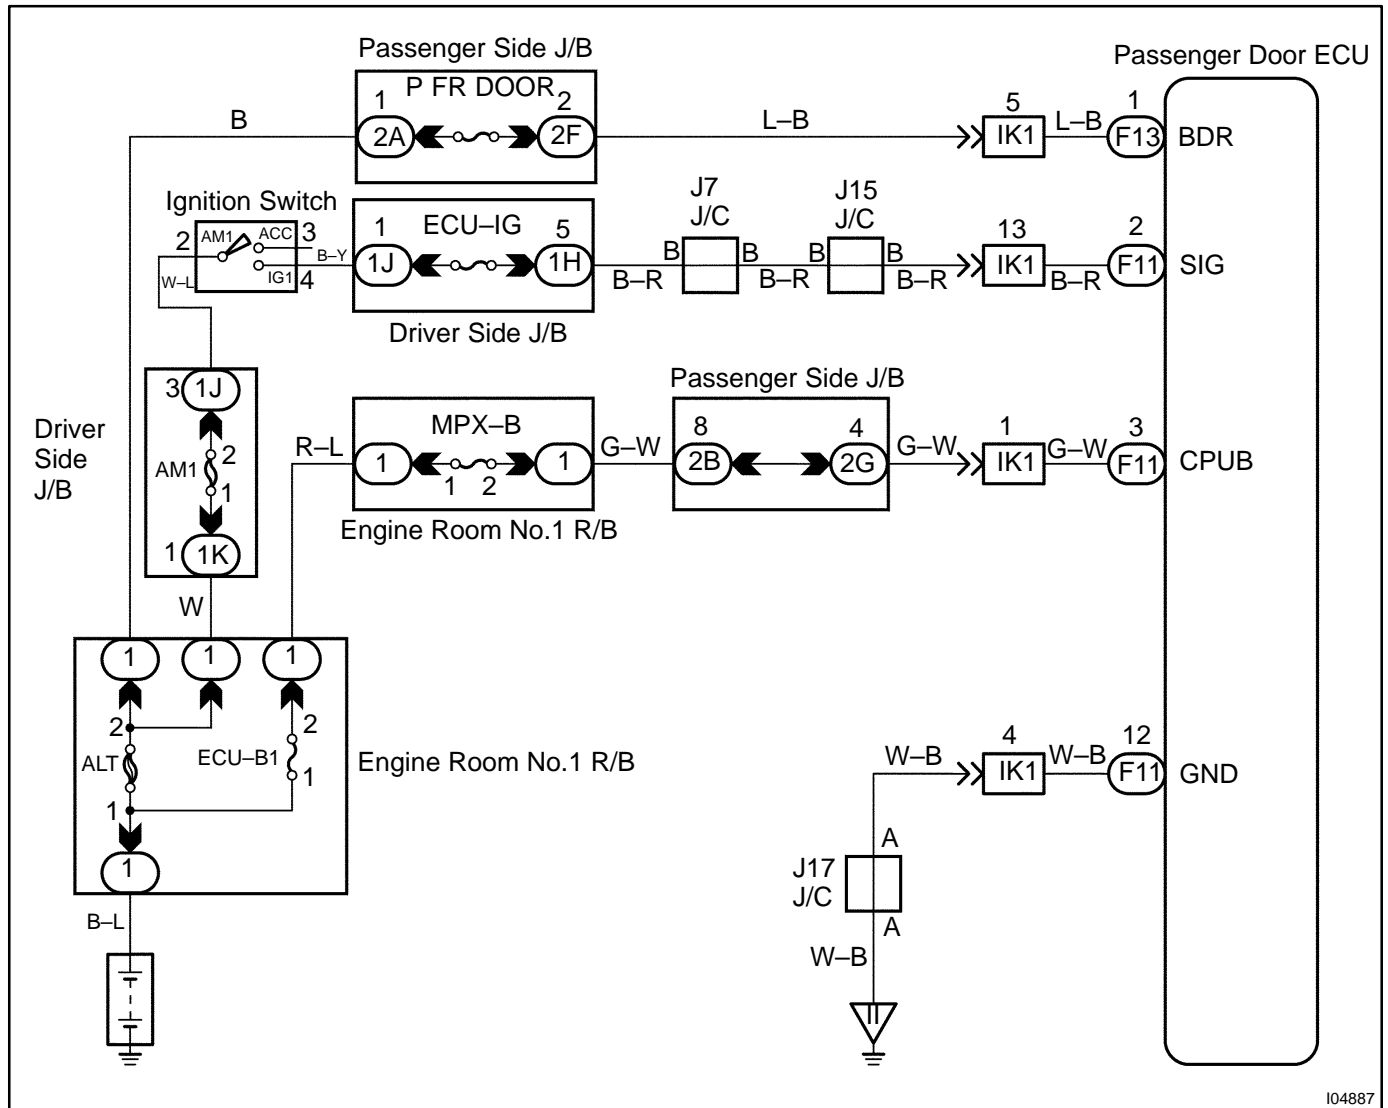

I04887

INSPECTION PROCEDURE

1	Check MPXB, GAUGE and DOOR(FR) fuse.
----------	---

CHECK:

Check continuity of MPXB,GAUGE and DOOR(FR) fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals BDR,CPUB, SIG and GND of passenger door ECU connector.
----------	---

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the passenger door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1047](#)).

NG

3	Check wireharness and connector between ECU and body ground.
---	--

NG**Repair or replace wireharness or connector****OK****Check and repair wireharness and connector
between ECU and battery.**