


Power Seat Motor

WIRING DIAGRAM

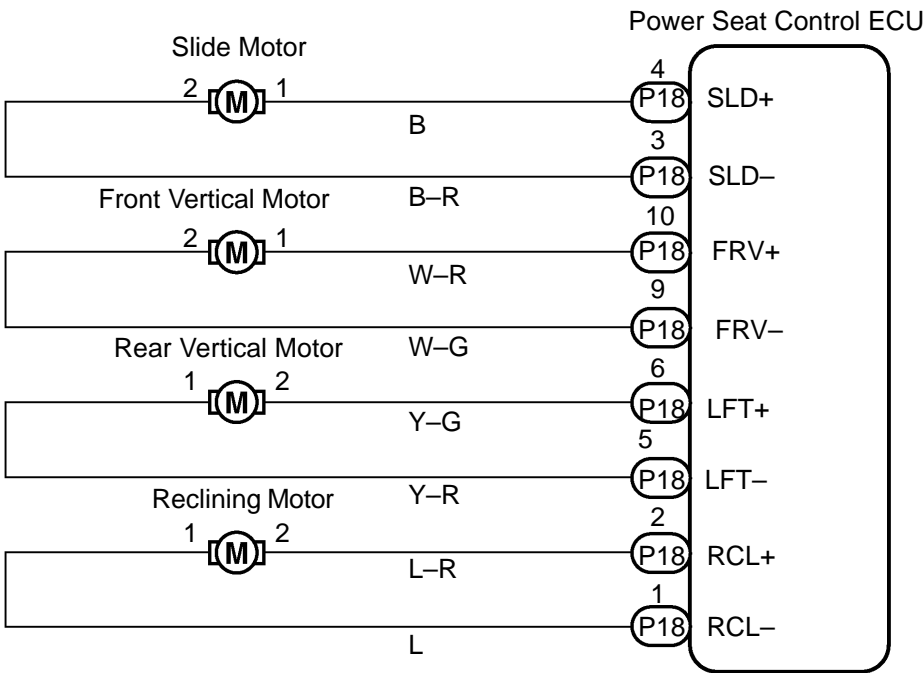

I04314

## INSPECTION PROCEDURE

### HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1	Perform active test.
---	----------------------

### PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester .

### CHECK:

Check that "Power seat motor" operates as the LEXUS hand-held tester directs.

### OK:

The seat operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-837](#)).

NG

2	Check power seat motor (See page <a href="#">BE-165</a> ).
---	--

NG

Replace the motor.

OK

3	Check harness and connector between Power Seat Position ECU and motor (See page <a href="#">IN-22</a> ).
---	--

OK

Repair or replace harness or connector.

NG

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-837](#)).