


<b>DTC</b>	<b>B2603</b>	<b>Tilt and Telescopic Manual switch circuit Malfunction</b>
------------	--------------	--

## CIRCUIT DESCRIPTION

The different voltage value is input to tilt and telescopic ECU by operating the manual switch. Then tilt and telescopic ECU judges which motor and which direction tilt motor or telescopic motor should be moved based on the voltage value.

DTC No. (See Page)	Detection Item	Trouble Area
B2603	The abnormal voltage value which is not within the specification is input to tilt and telescopic ECU when being operated with the manual switch.	<ul style="list-style-type: none"> <li>• Tilt and telescopic manual switch circuit</li> <li>• Tilt and telescopic ECU</li> </ul>

## WIRING DIAGRAM

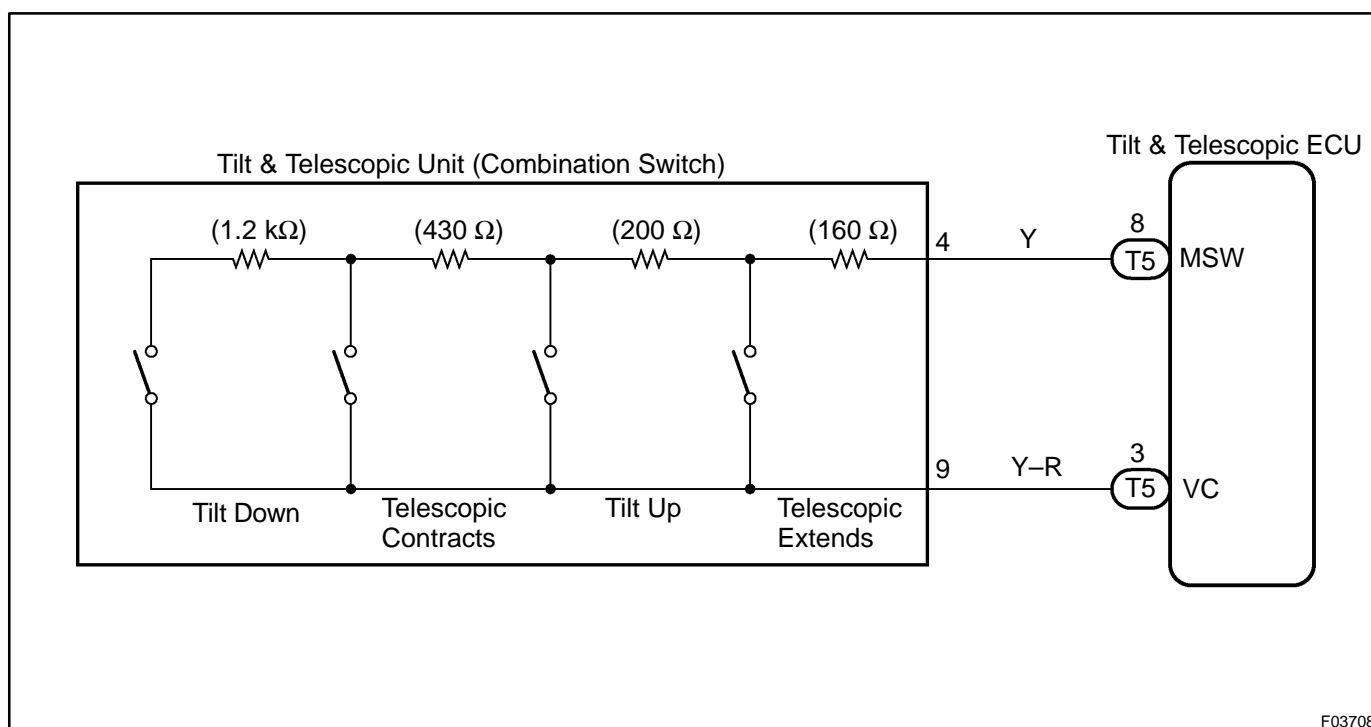

F03708

**INSPECTION PROCEDURE**

1	Check Tilt and telescopic manual switch circuit (See page <a href="#">DI-644</a> ).
---	---

**NG****Repair or replace malfunction part.****OK****Check and replace the tilt and telescopic ECU.**