


## Door courtesy light and courtesy switch circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

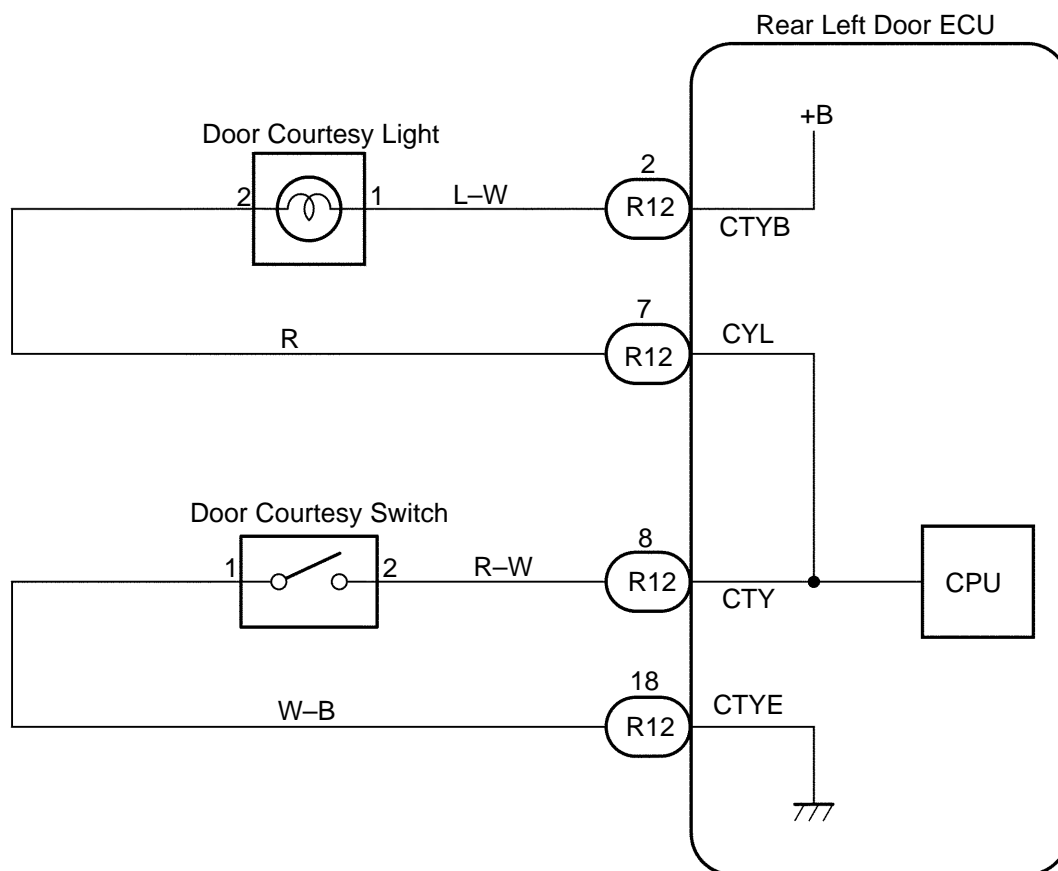

I03216

**INSPECTION PROCEDURE**

- |   |  |
|---|--|
| 1 | <b>Check operation of door courtesy light.</b> |
|---|--|

**CHECK:**

Check that door courtesy light comes on when door opened, and goes off when door is closed.

**OK:**

Must be operated normally.

**OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-931](#)).

**NG**

- |   |   |
|---|---|
| 2 | <b>Check courtesy light (See page <a href="#">BE-61</a>).</b> |
|---|---|

**NG**

Replace the courtesy light.

**OK**

- |   |  |
|---|--|
| 3 | <b>Check courtesy switch (See page <a href="#">BE-61</a>).</b> |
|---|--|

**NG**

Replace the courtesy switch.

**OK**

- |   |   |
|---|---|
| 4 | <b>Check wireharness and connector between courtesy light and rear left door ECU, courtesy switch and rear left door ECU.</b> |
|---|---|

**NG**

Repair or replace wireharness or connector.

**OK**

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-931](#))