

## PROBLEM SYMPTOMS TABLE

### POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
Power window does not operate.	3. Power window switch circuit 4. Power window motor circuit 5. Rear left door ECU	<a href="#">DI-1091</a> <a href="#">BE-123</a>
Auto up (or down) function does not operate.	1. Power window switch circuit 2. Rear left door ECU	<a href="#">DI-1091</a>
Jam protection function and auto up (or down) function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Rear left door ECU	<a href="#">BE-123</a> <a href="#">BE-123</a>

### OTHERS

Symptom	Suspect Area	See page
Parts of the door does not function.	1. Power source circuit 2. Rear left door ECU	<a href="#">DI-1082</a>