


## Door lock motor circuit

### WIRING DIAGRAM

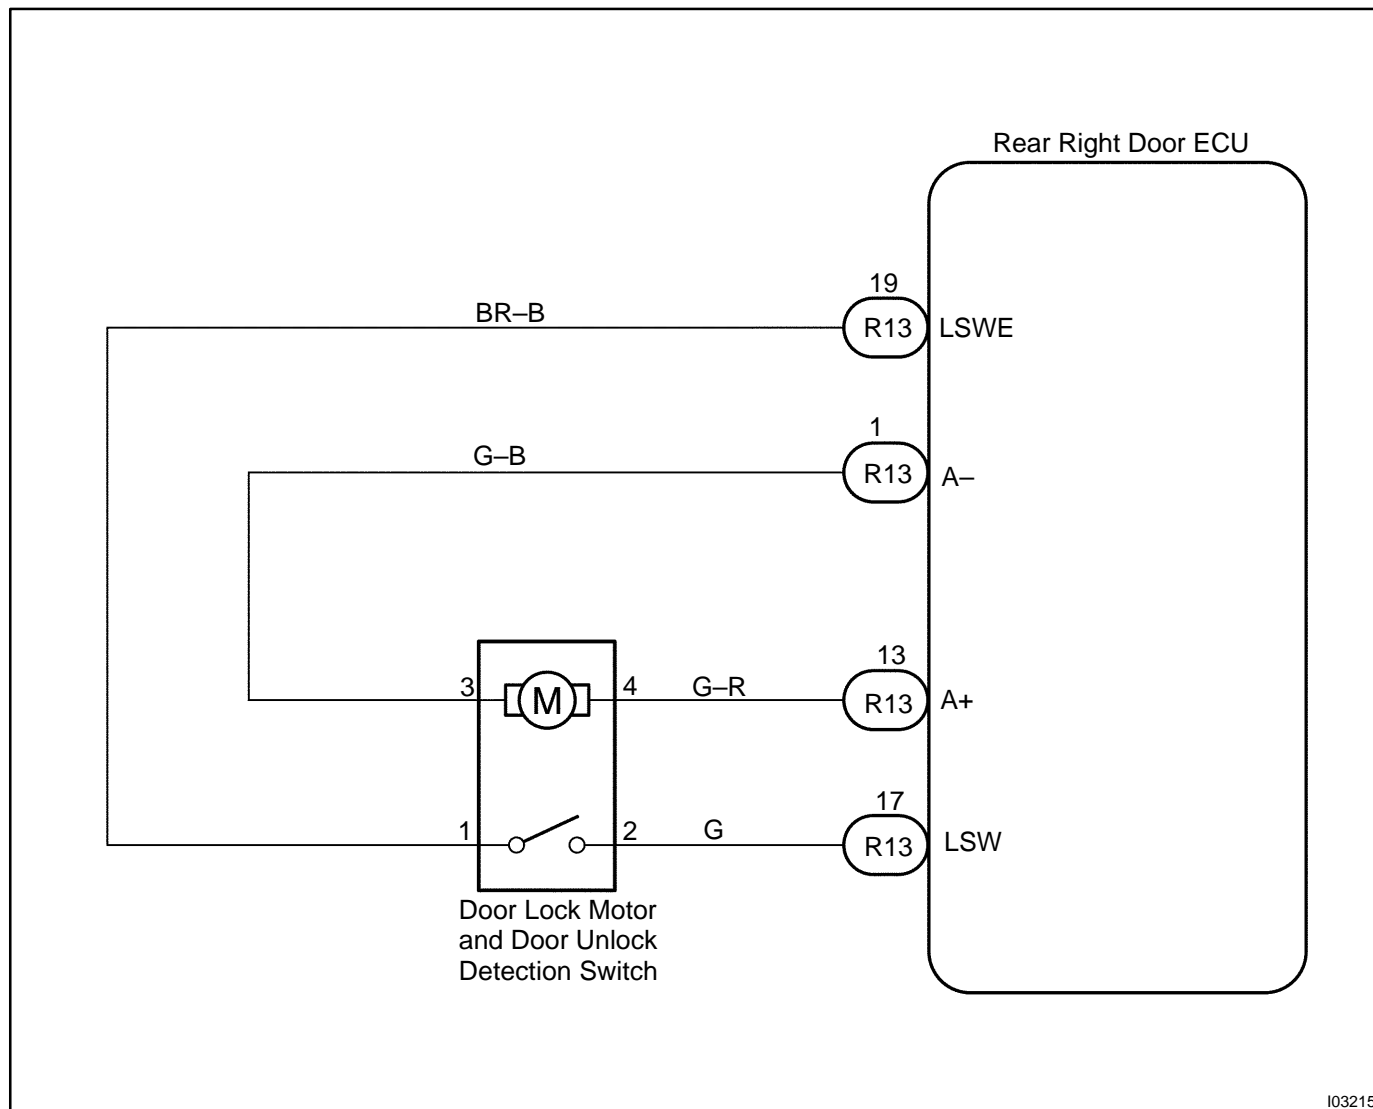

**INSPECTION PROCEDURE**

**1** Check door lock motor. (See page [BE-134](#))

**NG**

Replace the door lock motor.

**OK**

**2** Check wireharness and connector between door lock motor and rear right door ECU.

**NG**

Repair or replace wireharness or connector.

**OK**

Proceed to next circuit inspection shown on  
problem symptoms table.  
(See page [DI-931](#))