

Power source circuit

This circuit provides power to operate the rear right door ECU.

INSPECTION PROCEDURE

1	Check MPXB, GAUGE and DOOR(RR) fuse.
----------	---

CHECK:

Check continuity of MPXB,GAUGE and DOOR(RR) fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK**

2	Check voltage between terminals BDR,CPUB, SIG and GND of rear right door ECU connector.
----------	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the rear right door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1098](#)).****NG**

3**Check wireharness and connector between ECU and body ground.****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector
between ECU and battery.**