


Power window switch circuit

CIRCUIT DESCRIPTION

Power window switch circuit can be checked using DTC check. (Refer to [DI-1147](#))

WIRING DIAGRAM

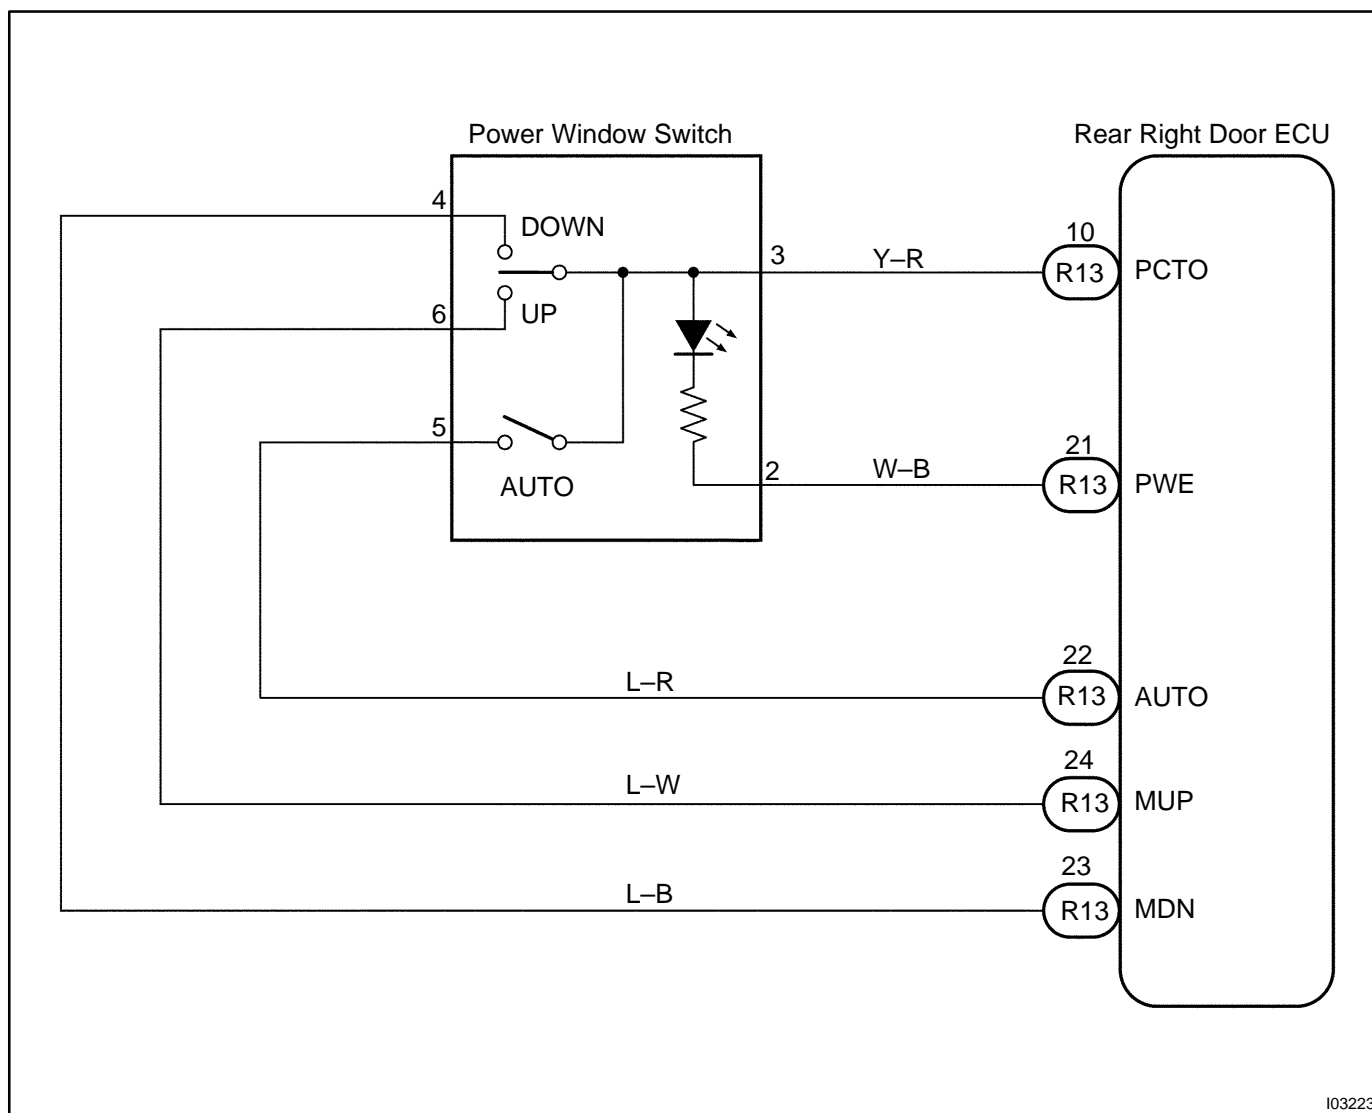

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check the power window switch circuit using DTC check. (See page DI-1147) |
|----------|--|

OK**Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-1098](#))****OK**

- | | |
|----------|---|
| 2 | Check the power window switch. (See page BE-123) |
|----------|---|

NG**Replace the power window switch.****OK**

- | | |
|----------|---|
| 3 | Check wireharness and connector between power window switch and rear right door ECU. |
|----------|---|

NG**Repair or replace wireharness or connector.****OK**

- | | |
|----------|--|
| 4 | Check wireharness and connector between power window switch and power window master switch. |
|----------|--|

NG**Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-1098](#))**