

## PROBLEM SYMPTOMS TABLE

### POWER WINDOW CONTROL SYSTEM:

Symptom	Suspect Area	See page
Power window does not operate.	3. Power window switch circuit 4. Power window motor circuit 5. Rear right door ECU	DI-1108 BE-123 –
Auto up (or down) function does not operate.	1. Power window switch circuit 2. Rear right door ECU	DI-1108 –
Jam protection function and auto up (or down) function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Rear right door ECU	BE-123 BE-123 –

### OTHERS:

Symptom	Suspect Area	See page
Parts of the door does not function.	1. Power source circuit 2. Rear right door ECU	DI-1099 –