

## PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Sliding roof control system does not operate.	4. S/ROOF Fuse 5. ECU-IG Fuse 6. Sliding Roof Control Switch Circuit 7. Sliding Roof Gear Assembly with ECU circuit	<a href="#">BE-21</a> <a href="#">BE-21</a> <a href="#">DI-921</a> <a href="#">DI-919</a>
Sliding roof operates abnormally (stops half way, sliding roof during close (down) operation).	1. Sliding Roof Control Switch Circuit 2. Sliding Roof Pulse Plate Circuit	<a href="#">DI-921</a> <a href="#">DI-924</a>
Jam protection system does not operate.	1. Sliding Roof Gear Assembly with ECU circuit	<a href="#">DI-919</a>