

CIRCUIT INSPECTION

DTC	C1201 / 51	Engine Control System Malfunction
------------	-------------------	--

CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the ECU prohibits TRAC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 / 51	Conditions 1. and 2. continue for 5 sec.: 1. Engine speed: 500 rpm or more. 2. A trouble signal in the engine control system is input.	Engine control system

INSPECTION PROCEDURE

1	Check the DTC for the engine (See page DI-3 or DI-173)
----------	---

*1

Repair engine control system according to the output code.

*1: Output NG code