


SLIP Indicator Light Circuit

CIRCUIT DESCRIPTION

The SLIP indicator blinks during TRAC & VSC operation.

WIRING DIAGRAM

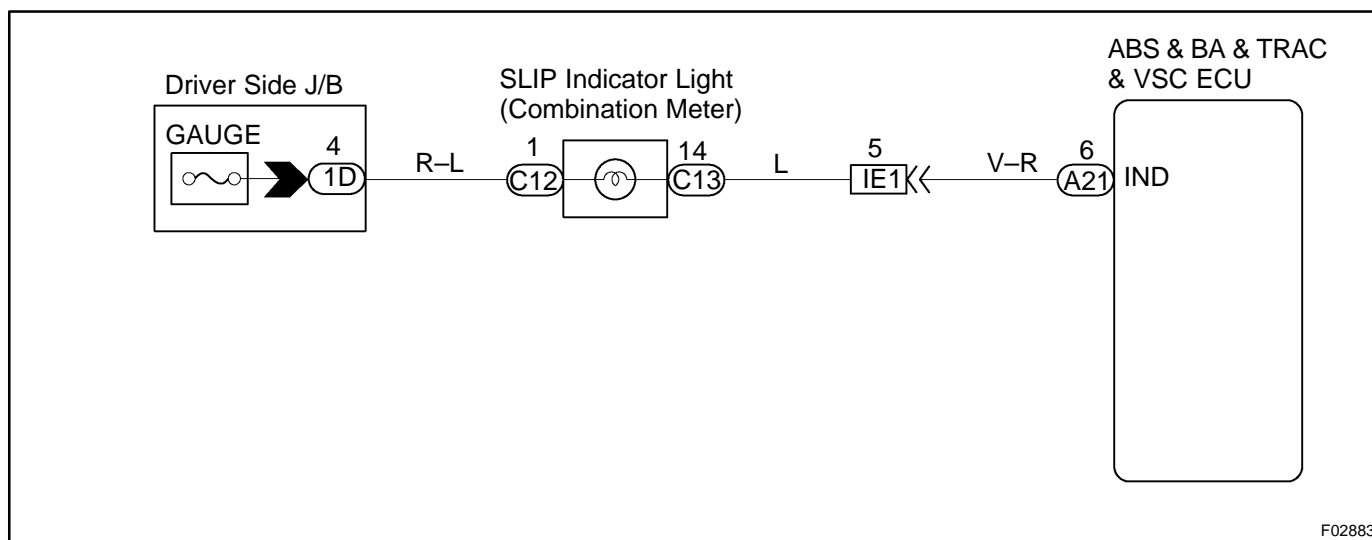

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the LEXUS hand-held tester and start from step 2 in case of not using the LEXUS hand-held tester.

1	Check operation of the SLIP indicator light.
---	---

PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that "ON" and "OFF" of the SLIP indicator light can be shown on the combination meter with the LEXUS hand-held tester.

OK

Go to step 4.

NG

2	Check that the SLIP indicator light is ON for 3 seconds soon after ignition switch is turned ON.
----------	---

OK

Check and replace ABS & BA & TRAC & VSC ECU.

NG

3	Check SLIP indicator light.
----------	------------------------------------

See combination meter troubleshooting on page [BE-3](#).

NG

Repair or replace combination meter check and replace ABS & BA & TRAC & VSC ECU.

OK

4	Check for open and short circuit in harness and connector between ABS & BA & TRAC & VSC ECU and SLIP indicator light (See page IN-32).
----------	---

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRAC & VSC ECU.