


VSC Warning Light Circuit

CIRCUIT DESCRIPTION

If the ECU stores DTC, the VSC warning light lights on the combination meter.

WIRING DIAGRAM

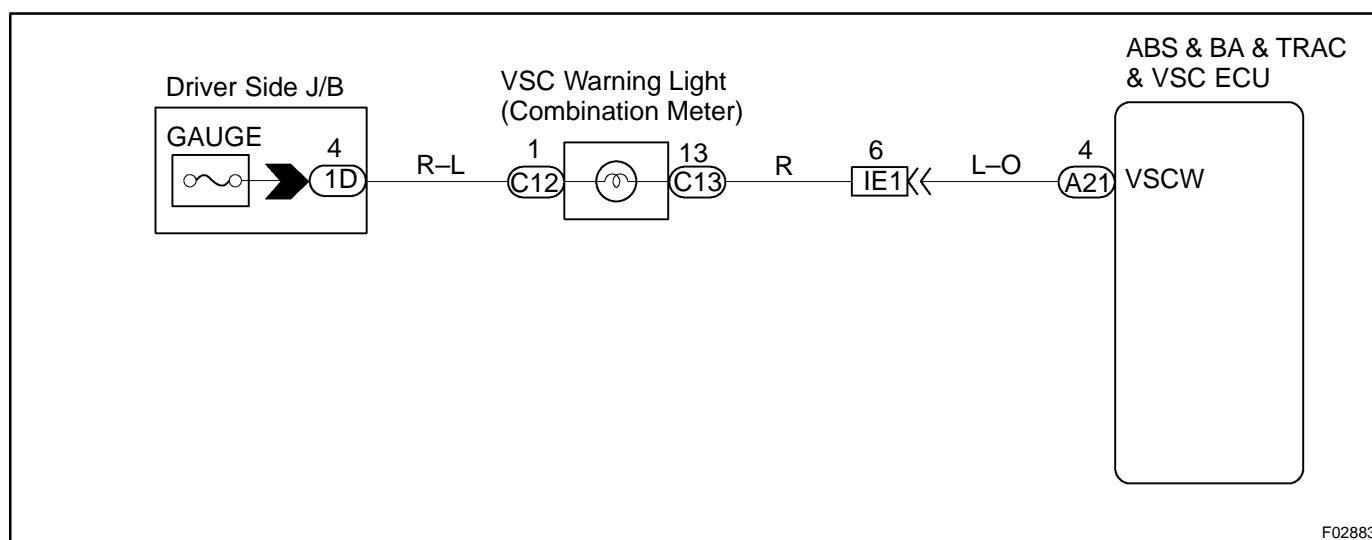

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the LEXUS hand-held tester and start from step 2 in case of not using the LEXUS hand-held tester.

1	Check operation of the VSC warning indicator.
---	---

PREPARATION:

- Connect the LEXUS hand-held tester to the DLC3.
- Turn the ignition switch ON and push the LEXUS hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that "ON" and "OFF" of the VSC warning light can be shown on the combination meter with the LEXUS hand-held tester.

OK

Check and replace ABS & BA & TRAC & VSC ECU.

NG

2	Is DTC output for VSC?
----------	-------------------------------

YES**Repair circuit indicated by the output code.****NO**

3	Check for open and short circuit in harness and connector between ABS & BA & TRAC & VSC ECU and VSC warning light (See page IN-32).
----------	--

NG**Repair or replace harness or connector.****OK**

4	Check VSC warning light.
----------	---------------------------------

See combination meter troubleshooting on page [BE-3](#).**NG****Repair or replace combination meter.****OK****Check and replace ABS & BA & TRAC & VSC ECU.**