

## PROBLEM SYMPTOMS TABLE

If a normal code is displayed the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

### NOTICE:

**When replacing ABS & BA & TRAC & VSC ECU, sensor or etc., turn the IG switch OFF.**

Symptom	Suspect Area	See page
TRAC does not operate	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & BA & TRAC & VSC ECU. 3. Check the DTC, reconfirming that the normal code is output. 4. IG power source circuit 5. Check the hydraulic circuit for leakage 6. Speed sensor circuit	DI-570 DI-511 DI-614 DI-497
VSC does not operate	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & BA & TRAC & VSC ECU. 1. Check the DTC, reconfirming that the normal code is output. 2. IG power source circuit 3. Check the hydraulic circuit for leakage 4. Speed sensor circuit 5. Deceleration sensor circuit 6. Yaw rate sensor circuit 7. Steering angle sensor circuit	DI-570 DI-511 DI-614 DI-497 DI-594 DI-596 DI-590
VSC warning light abnormal	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & BA & TRAC & VSC ECU. 1. VSC warning light circuit 2. ABS & BA & TRAC & VSC ECU	DI-605 IN-32
SLIP indicator light abnormal	SLIP indicator light circuit	DI-610
VSC OFF indicator abnormal	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & BA & TRAC & VSC ECU. 1. VSC OFF indicator light circuit 2. VSC OFF switch circuit	DI-607 DI-607
DTC check cannot be done	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & BA & TRAC & VSC ECU. 1. VSC warning light circuit 2. Tc terminal circuit	DI-605 DI-564