


## REPLACEMENT

### 1. REMOVE ENGINE UNDER COVER

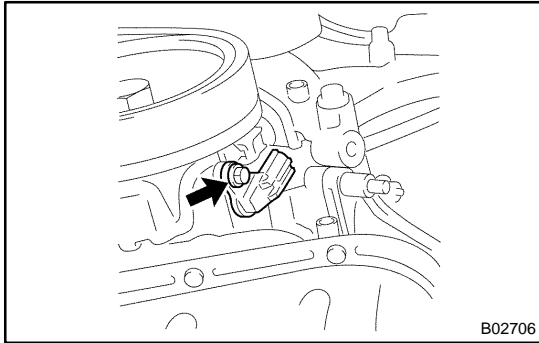

### 2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.
- (b) Remove the bolt and crankshaft position sensor

### 3. REINSTALL NEW CRANKSHAFT POSITION SENSOR

- (a) Install a new crankshaft position sensor with the bolt.  
**Torque: 6.5 N·m (65 kgf·cm, 58 in.-lbf)**
- (b) Connect the crankshaft position sensor connector.

### 4. REINSTALL ENGINE UNDER COVER