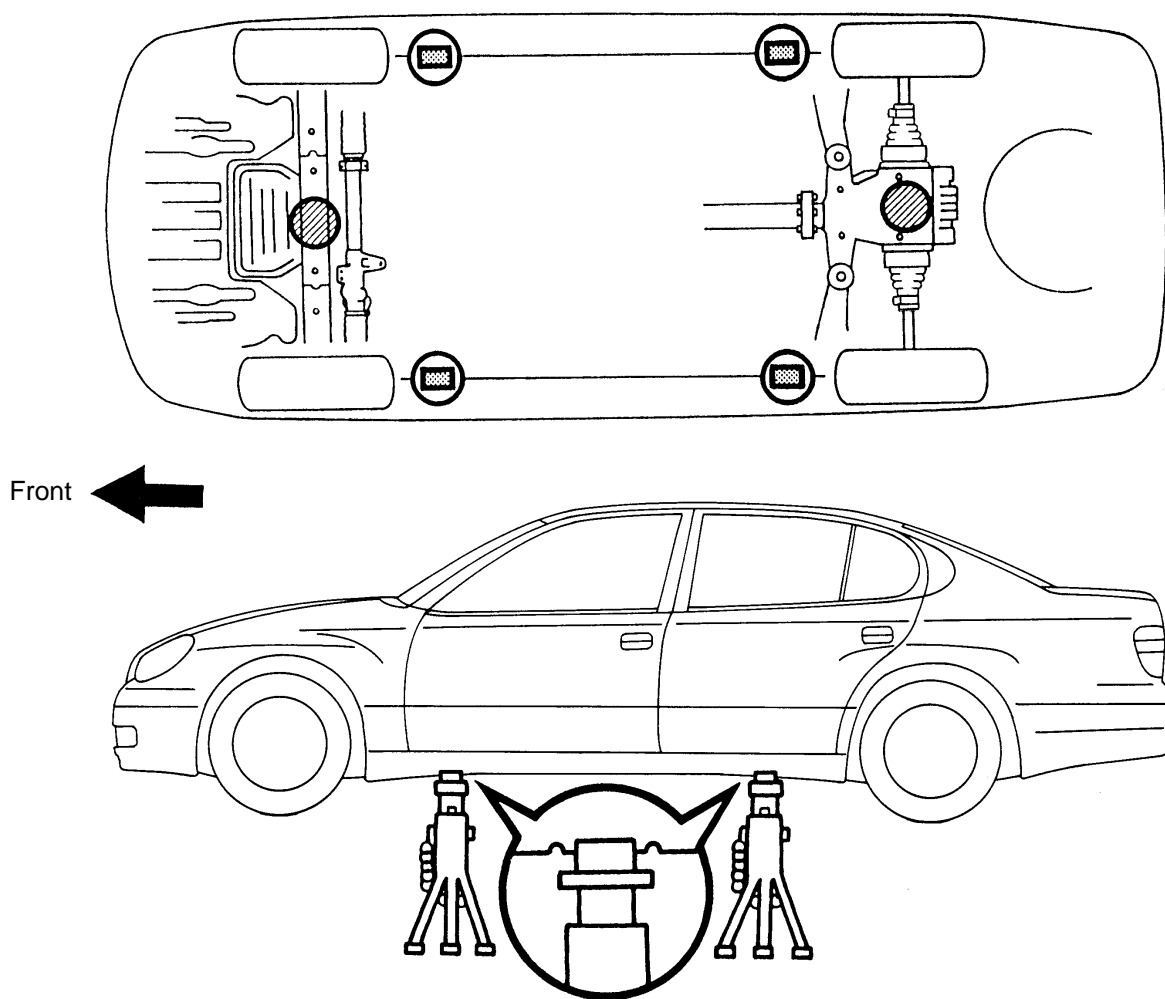


VEHICLE LIFT AND SUPPORT LOCATIONS



JACK POSITION

Front ----- Front crossmember
 Rear ----- Differential carrier

CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.

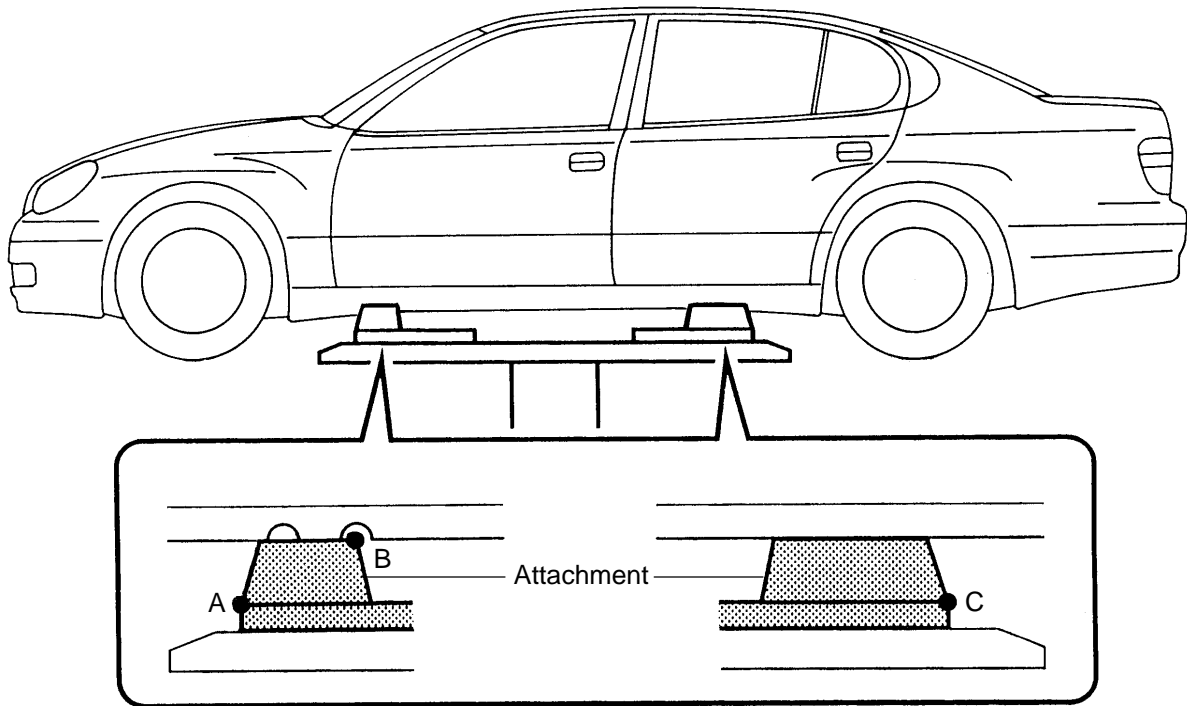
PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift -----



B02385

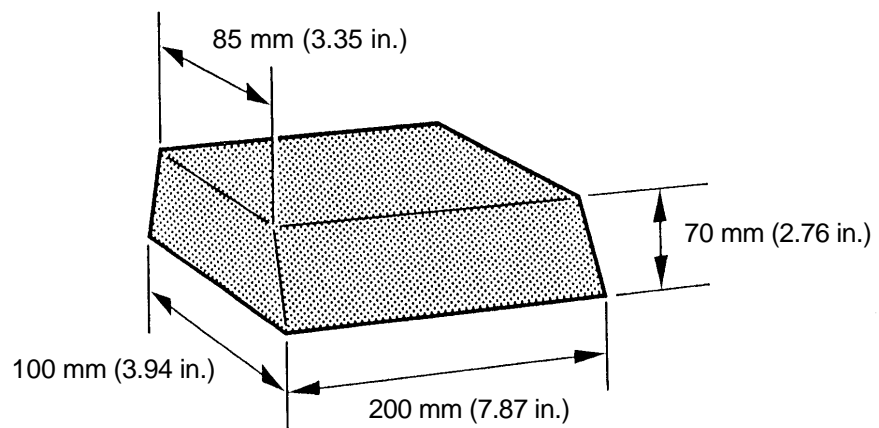
Plate type lift**HINT :**

Left and right set position

Place the vehicle over the center of the lift.

Front and rear set position

- When using attachments, place the one for front side vertically and the one for rear side horizontally to the vehicle.
- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the rocker flange rear side notch.

Attachment dimensions

B02135