


ENGINE INSPECTION

HINT:

Inspect these items when the engine is cold.

1. **REPLACE TIMING BELT**
(2JZ-GE ENGINE: See page [EM-16](#))
(3UZ-FE ENGINE: See page [EM-12](#))
2. **INSPECT DRIVE BELT**
(2JZ-GE ENGINE: See page [CH-1](#))
(3UZ-FE ENGINE: See page [CH-1](#))
3. **REPLACE SPARK PLUGS**
(2JZ-GE ENGINE: See page [IG-1](#))
(3UZ-FE ENGINE: See page [IG-1](#))

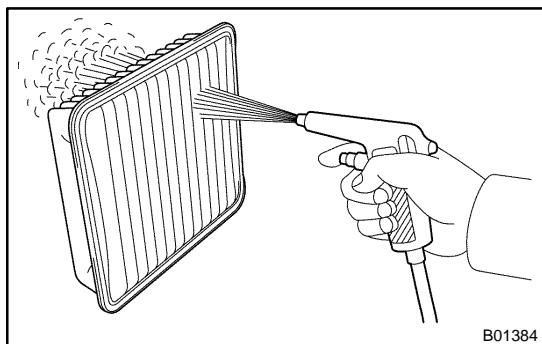

4. **INSPECT AIR FILTER**
 - (a) Remove the air filter.
 - (b) Visually check that the air filter is not excessively damaged or oily.

If necessary, replace the air filter.

 - (c) Clean the filter with compressed air.
First blow from the inside thoroughly, then blow the outside of the filter.
 - (d) Reinstall the air filter.

5. REPLACE AIR FILTER

Replace the air filter with a new one.

6. **REPLACE ENGINE OIL AND OIL FILTER**
(2JZ-GE ENGINE: See page [LU-2](#))
(3UZ-FE ENGINE: See page [LU-3](#))
7. **REPLACE ENGINE COOLANT**
(2JZ-GE ENGINE: See page [CO-2](#))
(3UZ-FE ENGINE: See page [CO-2](#))
8. **REPLACE GASKET IN FUEL TANK CAP**
(2JZ-GE ENGINE: See page [EC-7](#))
(3UZ-FE ENGINE: See page [EC-6](#))

9. INSPECT FUEL LINES AND CONNECTIONS

Visually check the fuel lines for cracks, leakage, loose connections, deformation or tank band looseness.

10. INSPECT EXHAUST PIPES AND MOUNTINGS

Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.

11. ADJUST VALVE CLEARANCE

- (2JZ-GE ENGINE: See page [EM-5](#))
(3UZ-FE ENGINE: See page [EM-4](#))