


## INSTALLATION

### NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.**
- **Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

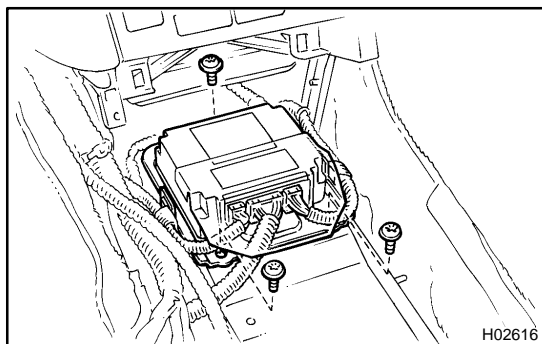

### 1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, install the airbag sensor assembly with 3 screws.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**

**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

- (b) Connect the airbag sensor connectors.

### NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed to the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installing, shake the sensor assembly to check that there is no looseness.**

### 2. INSTALL THESE PARTS: (See page [BO-97](#))

- (a) No.1 console box duct
- (b) No.3 console box mounting bracket
- (c) Console box
- (d) Console box register
- (e) Rear console armrest
- (f) Lower rear console box
- (g) Accessory case
- (h) Accessory socket
- (i) Console box carpet
- (j) Cluster finish panel
- (k) Front ash receptacle
- (l) Glove compartment panel assembly
- (m) Glove compartment finish plate
- (n) No.2 under cover
- (o) No.1 safety pad
- (p) Hood lock release lever
- (q) No.1 under cover
- (r) End Pad
- (s) Finish plate