



## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
  - Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.
1. REMOVE ROOF HEADLINING (See page [BO-103](#))

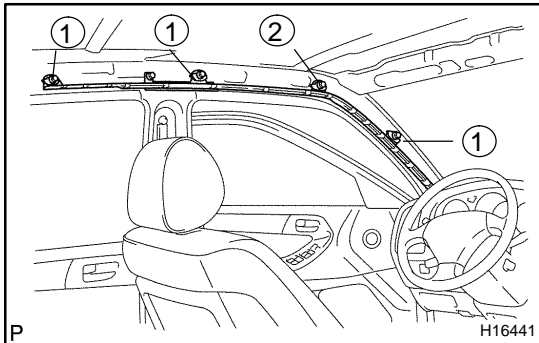

2. In case without removing inflator:  
**REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY**
  - (a) Remove the screw and rear side rail spacer.
  - (b) In the order shown in the illustration, remove the bolts and deployment section of the curtain shield airbag assembly.

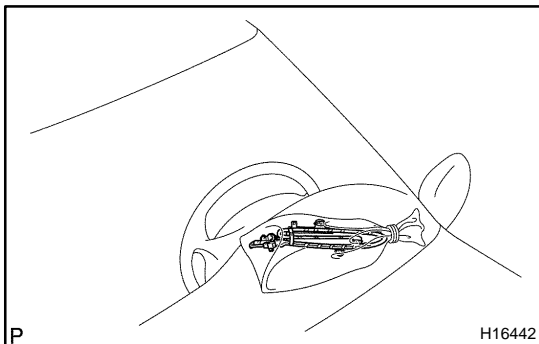

- (c) Put the removed airbag in the clear plastic bag and put it on the instrument panel.

### CAUTION:

Never disassemble the curtain shield airbag assembly.


### NOTICE:

Clear plastic bag is not reuse.

3. REMOVE INSTRUMENT PANEL (See page [BO-91](#))
4. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY
  - (a) Disconnect the curtain shield airbag connector.

### NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

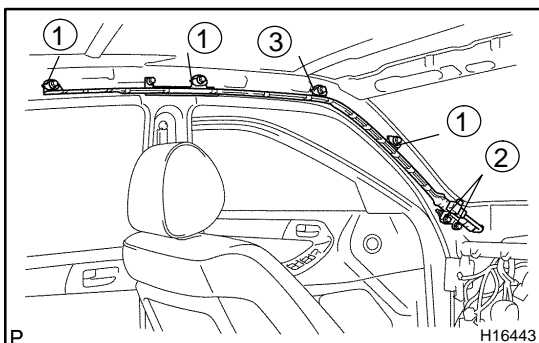

- (b) Remove the screw and rear side rail spacer.
- (c) In the order shown in the illustration, remove the bolts and curtain shield airbag assembly.

### HINT:

- Loosen the bolt (3) before removing the bolt (2).
- Bind the front and rear parts of the curtain shield airbag assembly before removing the bolt (3).

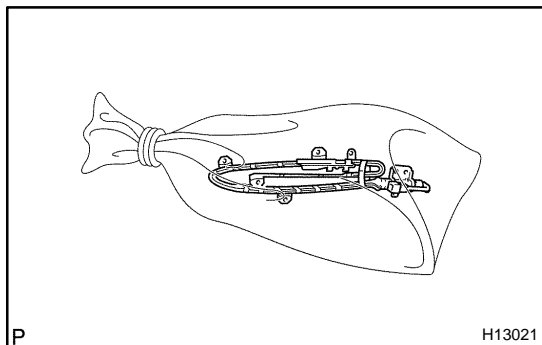

- (d) Put the removed curtain shield airbag in a clear plastic bag and keep it in a safe place.

**CAUTION:**

**Never disassemble the curtain shield airbag assembly.**

**NOTICE:**

**aProtection bag is not reuse.**