



FRONT AIRBAG SENSOR COMPONENTS

RS07U-04

2JZ-GE Engine:
Air Cleaner Assembly

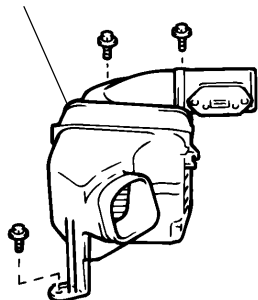


3UZ-FE Engine:
Air Cleaner Assembly

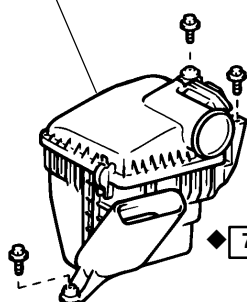

Air Cleaner Inlet No.1




ECU Box Upper Cover

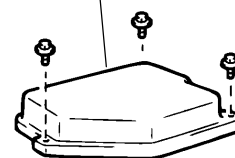

Front Airbag
Sensor RH

◆ 7.8 (80, 69 in.-lbf)

◆ 7.8 (80, 69 in.-lbf)

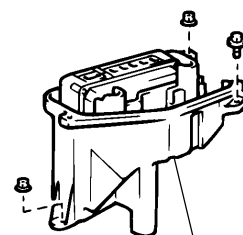

ECU Box

Front Airbag Sensor LH

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

H02618