

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement.

- If the airbag has been deployed.
- If the front passenger airbag assembly has been found to be faulty in troubleshooting.
- If the front passenger airbag assembly, instrument panel or instrument panel reinforcement has been found to be faulty during the check in items.(See page [RS-28](#))
- If the front passenger airbag assembly has been dropped.

CAUTION:

For replacement of the front passenger airbag assembly, see page [RS-27](#) and [RS-37](#).

Be sure to follow the correct procedure.